Legend	
	TRANSFORMER
X	TERMINATION
	SWITCH
	SUBSTATION
	SERVICE POINT
	RISER
	MANHOLE
	JUNCTION
	HANDHOLE
Image: Control of the	FUSE
*	FAULT THROWER
	CONNECTION BOX
	CONDUCTOR
+	CAPACITOR
•	BREAKER