


AUD CO^P
FIG

Command: **UDSSETCFG**




Change Configuration to Edit: from Global to This Job

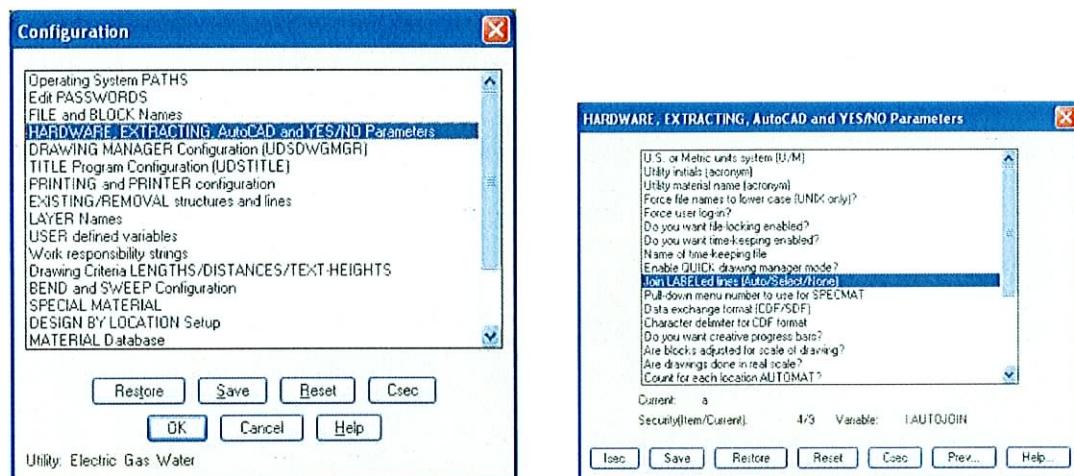

Select: **HARDWARE, EXTRACTING, AutoCAD and YES/NO Parameters** (double click)

Select: **Join LABELled lines (Auto/Select/None)** (double click)

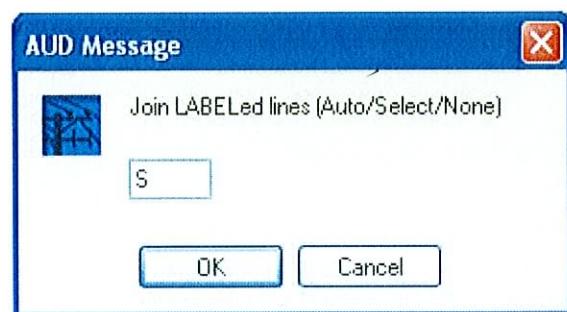

Type: S for Select



Close

OK