


Before show/hide command

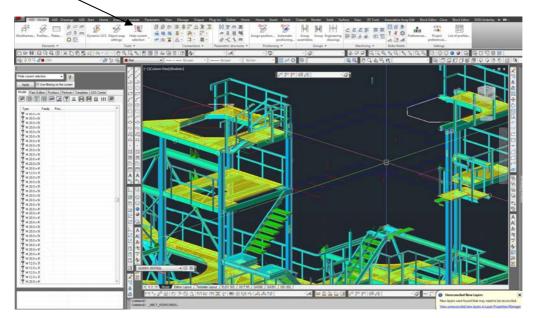

After Show/hide command

If this doesn't resolve your Problem. go to Project preference and Uncheck ->Simplified Modelling of parametric structures and have -> simplified modelling of connectors checked.

General	Standard 👻			Default
Units Materials	Tolerances		-	Save
Profiles	Parts identifying during positioning	0.01	%	
Styles	Contact of welded parts	1	mm	Delete
Connectors Standards	Arc display accuracy	128		
	Nomenclature of assemblies	Nomenclature of plates		
	© Text	- Overwrite		
	Main part name	prefix	ОК	
	<ul> <li>Family + main part name</li> </ul>			
	Taniy Mairparriano			Cancel
			Families settings	

Also try to regenerate structures to Full mode, this has been a problem to my structures.

Specially on Notches, connectors and handrails trimming.

