



If I Change the valve type to another type he take only the type without changing the tag No. as per the type of valve settings (the example shown in the second screen shot)

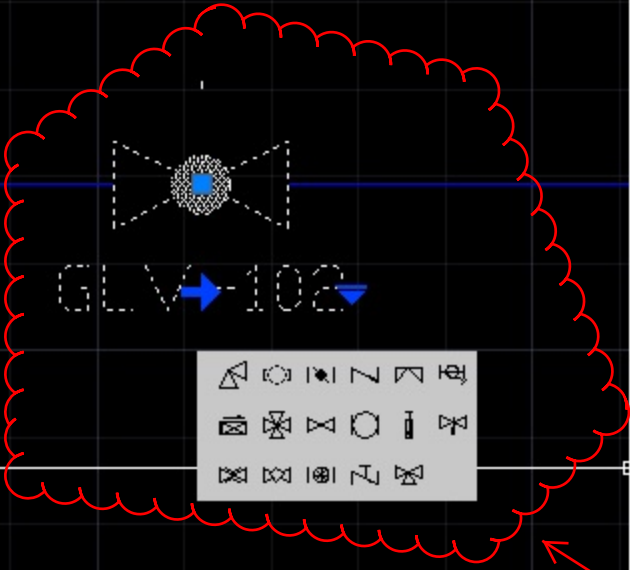

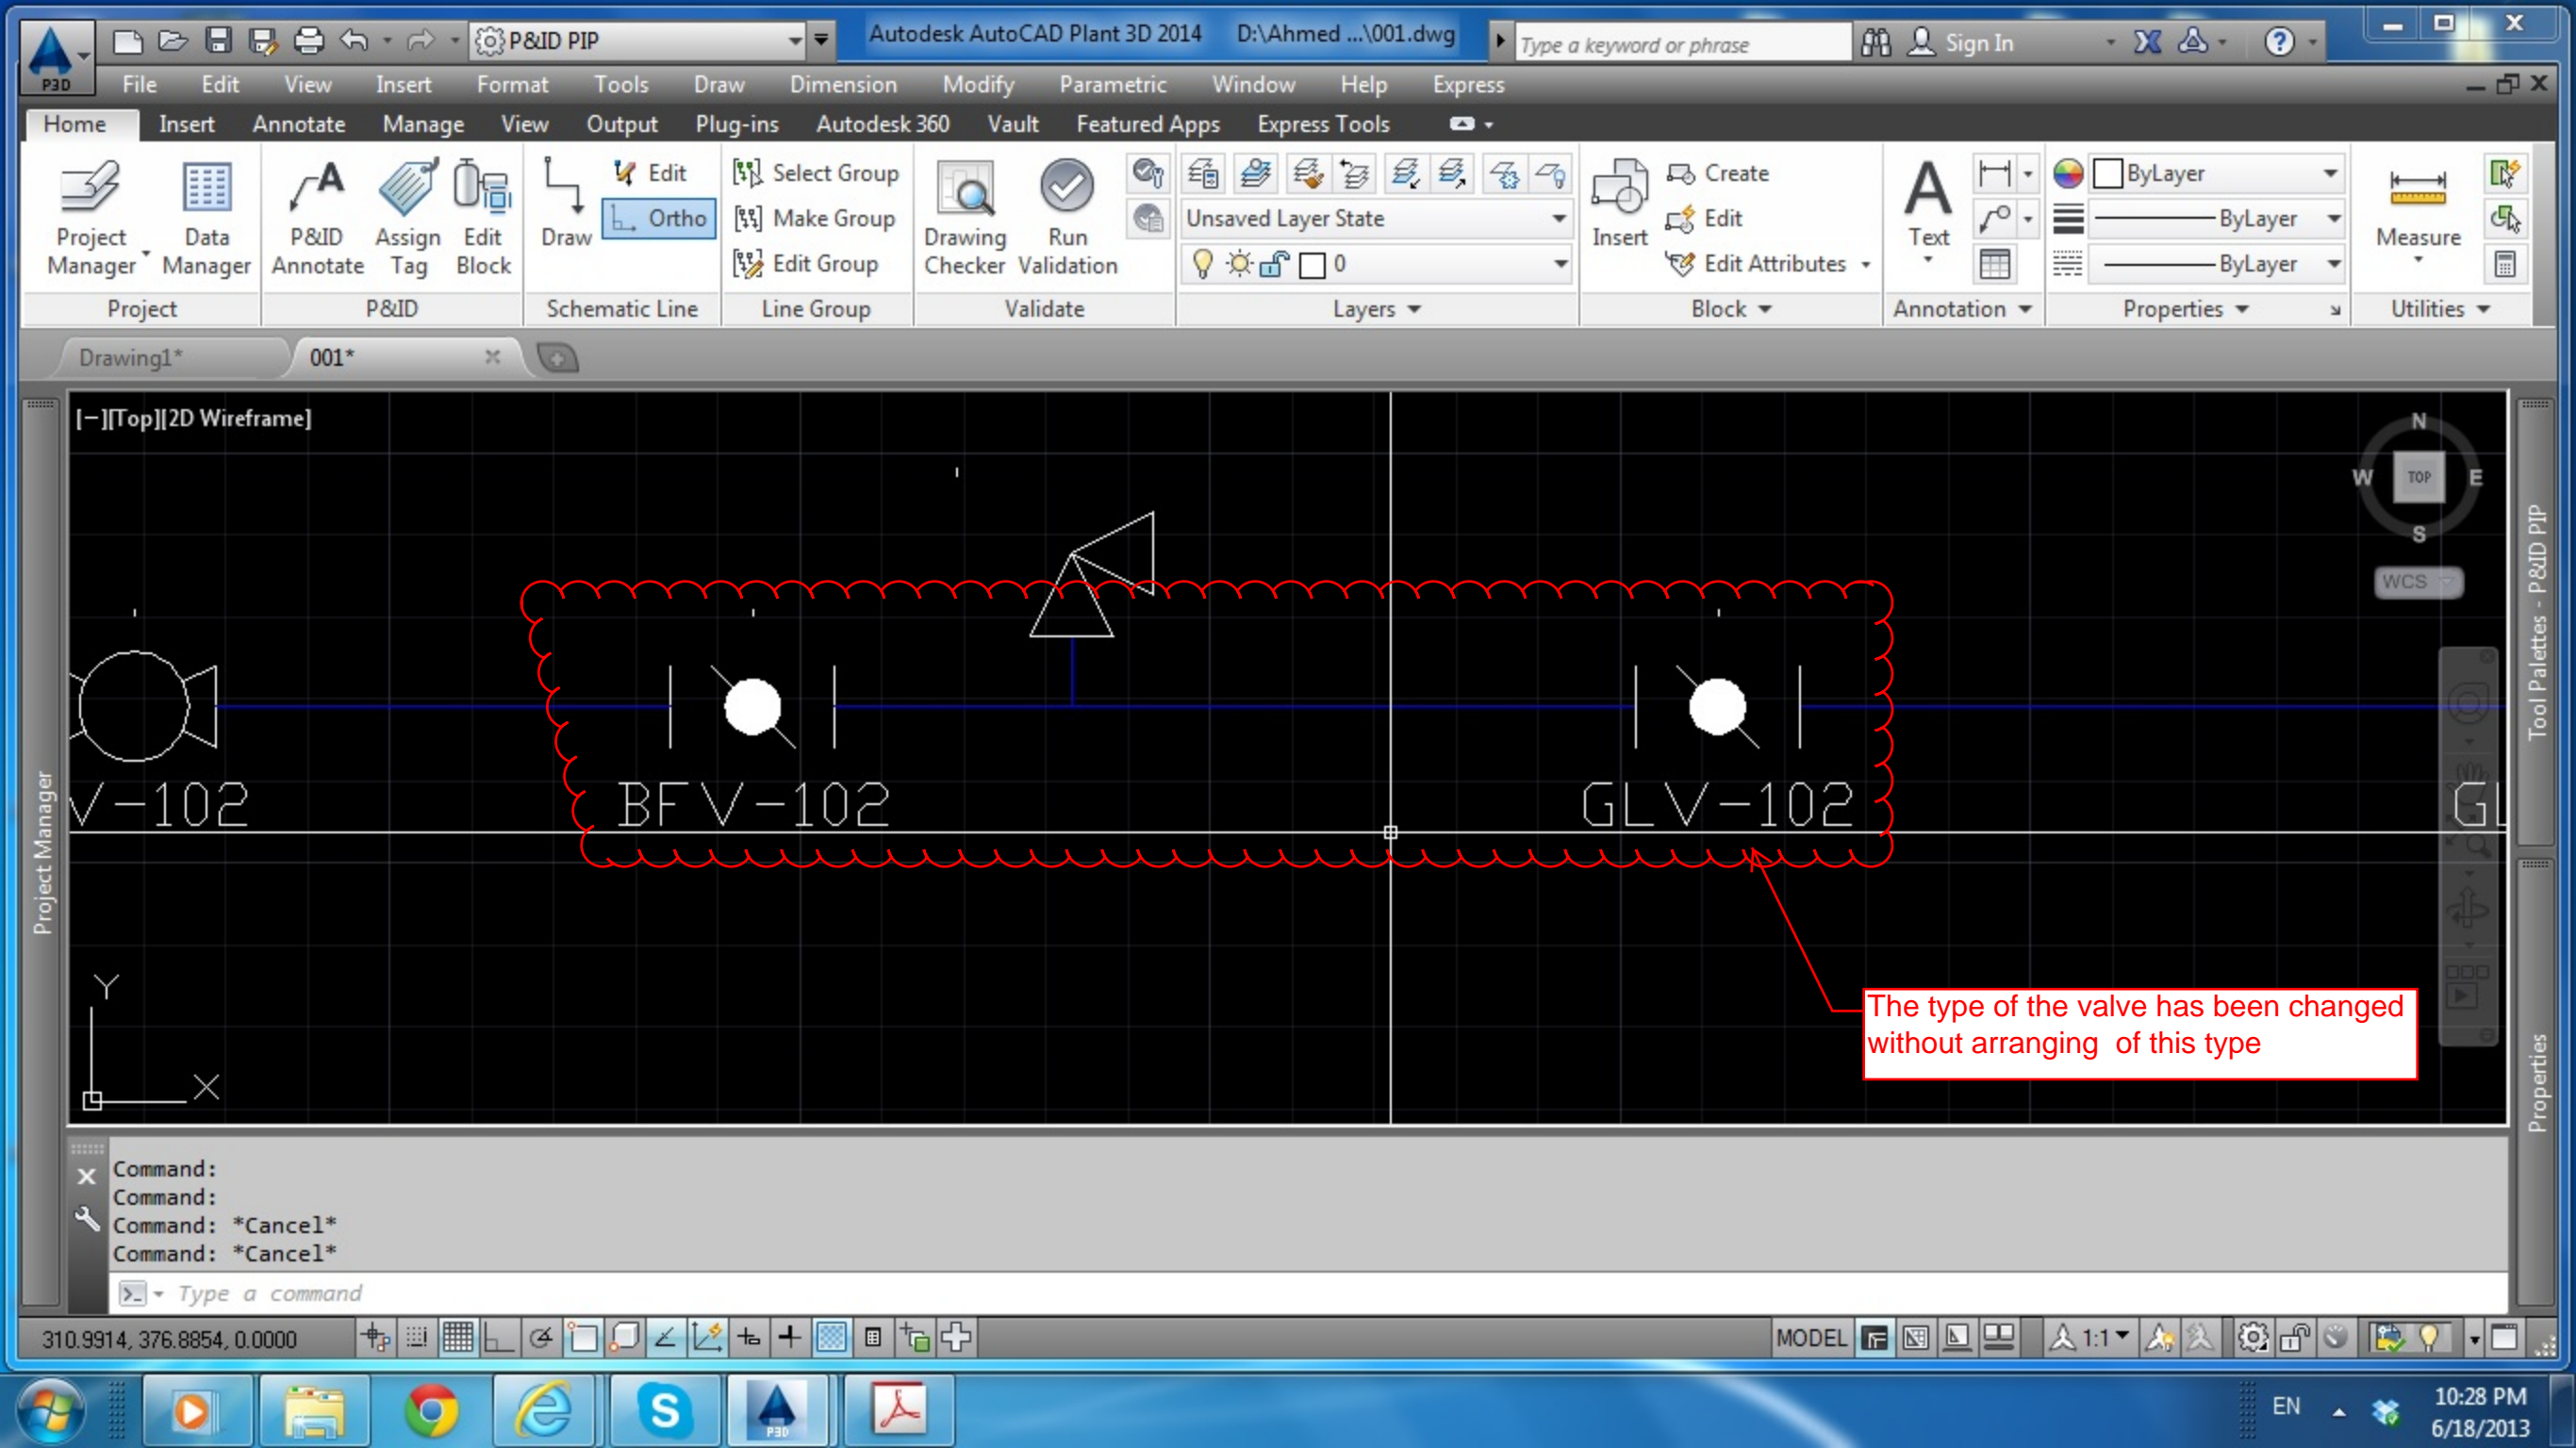

The type of the valve has been changed without arranging of this type