

dra BROACH*

[--][Top][2D Wireframe]


This component have to be SB-22 OR SC-22 but still have the reference from the sheet number 1



J | K | L | M | N | A | B | C | D | E | F | G | H | I

21 [-9] 2 NEUTRO
[-9] 1 120 VAC

This also
Have to be HD-22 OR HE-22

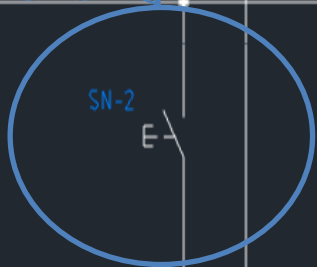

Component Fence, From Point: to to

Type a command



what I do to respect the reference is to change the origin of the grid each time that i insert any component but when I use arrows to or from. I have to change it manually.

I think it's not a solution.

