

## Set up Subassemblies in the Catalog Database

Link a main catalog item with other subassembly items.

Locate the catalog record for the main catalog item.

Click the ASSEMBLYCODE cell.

Select an existing value from the drop-down list or enter a new value. Spaces are allowed. Use multiple codes to link to multiple subassembly items.

Note: Use a semi-colon, ";", to separate multiple codes. For example, NOBLOCK;NCBLOCK.

Enter a number in the ASSEMBLYQUANTITY field to define the quantity of these subassembly items to include with the main catalog value. A blank value is the same as a 1.

Note: to define a quantity for each subassembly when multiple ASSEMBLYCODE values are assigned, prefix the ASSEMBLYCODE value code with the quantity followed by a comma, ",". For example, 2,NOBLOCK;3,NCBLOCK.

Locate the catalog record for the subassembly item.

Click the ASSEMBLYLIST cell.

Select the ASSEMBLYCODE value for the main catalog from the drop-down list.

Enter a number in the ASSEMBLYQUANTITY field to define the quantity to include with this ASSEMBLYCODE.

Note: Subassembly catalog items must be in the same database table as the main catalog item.