

MAP COMMANDS IN CIVIL 3D

Do Not Work

DDIST

FEATUREDEF "You have insufficient privileges to execute this command"

MAPCGANG

MAPCGLIST

MAPCGCDIST

MAPCGSETUP

MAPCGSLIST

MAPCGAZBASE

MAPCGDIST

MAPCGLIST

MAPCOGO

MAPCOGOFUNCTION

Do Not Work as would in Map 3D

MAPTOACAD No export Wizard in Civil 3D

Does Work That I didn't think would

MAPDIST