

COURSE TABLE

From	To	Distance	Bearing
101	102	60.00'	S00°00'00.00"E
102	103	75.00'	N90°00'00.00"E
103	104	105.00'	S00°00'00.00"E
104	105	90.00'	N90°00'00.00"E
105	106	100.00'	N00°00'00.00"E
106	107	85.00'	N90°00'00.00"E
107	108	70.50'	N00°00'00.00"E
108	109	50.00'	N90°00'00.00"E