

Parts List Issue in Inventor 2010 *.iwd drawing file[mpdesigner]

The screenshot displays the Autodesk Inventor 2010 interface. The title bar shows the file name "A000000WA1". The ribbon includes tabs for "Place Views", "Annotate (ESKD)", "Tools", "Manage", "View", "Environments", and "Get Started". The "Annotate (ESKD)" ribbon is active, showing tools for "Dimension", "Hole and Thread", "Text", "Leader Text", "Symbols", "Create Sketch", "Parts List", "Balloon", and "Edit Layers".

The left-hand "Model" tree shows the following structure:

- A000000WA1
 - Drawing Resources
 - Sheet:1
 - Default Border
 - ANSI - Large
 - Field Text
 - VIEW2:A000000WA1.iam
 - VIEW3:P000000WA4.ipt
 - VIEW5:P000000WA3.ipt
 - VIEW7:P000000WA1.ipt
 - VIEW11:P000000WA2.ipt

The main drawing area contains a technical drawing of a wheel assembly. It includes an isometric view at the top left, a front view with dimensions (e.g., 76.00, 35.00, 2.00, 19.30, 23.29x3.45), a side view, a cross-section labeled "SECTION A-A SCALE 1:1", and a circular detail view. A parts list table is located in the bottom right corner of the drawing area.

| REV | DESCRIPTION | DATE | BY | CHKD |
|------|-------------|----------|----|------|
| 0000 | | 4/5/2011 | | |
| 0001 | | | | |
| 0002 | | | | |
| 0003 | | | | |
| 0004 | | | | |
| 0005 | | | | |
| 0006 | | | | |
| 0007 | | | | |
| 0008 | | | | |
| 0009 | | | | |
| 0010 | | | | |
| 0011 | | | | |
| 0012 | | | | |
| 0013 | | | | |
| 0014 | | | | |
| 0015 | | | | |
| 0016 | | | | |
| 0017 | | | | |
| 0018 | | | | |
| 0019 | | | | |
| 0020 | | | | |
| 0021 | | | | |
| 0022 | | | | |
| 0023 | | | | |
| 0024 | | | | |
| 0025 | | | | |
| 0026 | | | | |
| 0027 | | | | |
| 0028 | | | | |
| 0029 | | | | |
| 0030 | | | | |
| 0031 | | | | |
| 0032 | | | | |
| 0033 | | | | |
| 0034 | | | | |
| 0035 | | | | |
| 0036 | | | | |
| 0037 | | | | |
| 0038 | | | | |
| 0039 | | | | |
| 0040 | | | | |
| 0041 | | | | |
| 0042 | | | | |
| 0043 | | | | |
| 0044 | | | | |
| 0045 | | | | |
| 0046 | | | | |
| 0047 | | | | |
| 0048 | | | | |
| 0049 | | | | |
| 0050 | | | | |
| 0051 | | | | |
| 0052 | | | | |
| 0053 | | | | |
| 0054 | | | | |
| 0055 | | | | |
| 0056 | | | | |
| 0057 | | | | |
| 0058 | | | | |
| 0059 | | | | |
| 0060 | | | | |
| 0061 | | | | |
| 0062 | | | | |
| 0063 | | | | |
| 0064 | | | | |
| 0065 | | | | |
| 0066 | | | | |
| 0067 | | | | |
| 0068 | | | | |
| 0069 | | | | |
| 0070 | | | | |
| 0071 | | | | |
| 0072 | | | | |
| 0073 | | | | |
| 0074 | | | | |
| 0075 | | | | |
| 0076 | | | | |
| 0077 | | | | |
| 0078 | | | | |
| 0079 | | | | |
| 0080 | | | | |
| 0081 | | | | |
| 0082 | | | | |
| 0083 | | | | |
| 0084 | | | | |
| 0085 | | | | |
| 0086 | | | | |
| 0087 | | | | |
| 0088 | | | | |
| 0089 | | | | |
| 0090 | | | | |
| 0091 | | | | |
| 0092 | | | | |
| 0093 | | | | |
| 0094 | | | | |
| 0095 | | | | |
| 0096 | | | | |
| 0097 | | | | |
| 0098 | | | | |
| 0099 | | | | |
| 0100 | | | | |

The status bar at the bottom left reads "For Help, press F1". The bottom right corner shows the page number "9" and a small green icon.