

STEP 3

CAREFULLY REMOVE THE STRAPPING HOLDING THE DISPLAYS TO THE PALLET.

NEXT, REMOVE THE PALLET CLEATS, HARD CORNERS AND LOWER CARDBOARD SHEETS.

CAREFULLY REMOVE THE REMAINING STRETCH WRAP ON THE DISPLAY.
(THEY ARE NOW READY TO BE REMOVED FROM THE PALLET.)

