

Question



Is there any way to automatically keep the “level head” out of the drawing? Whenever I create section view, I need to adjust the position of this level heads. It takes lot of time to update in a big size project.

General, Application & Hardware Information

Application Used : Autodesk Revit 2016
Build : 16.0.1185.0
Release : Update7 for R2
Operating System : Windows 7 Professional
System Type : 64-Bit
Processor : Intel® Xeon® Processor E5-1620 (10M Cache, 3.60 GHz) FC-LGA10, Tray
Memory : 128 GB

Other Information's

Screenshots & Related Information's

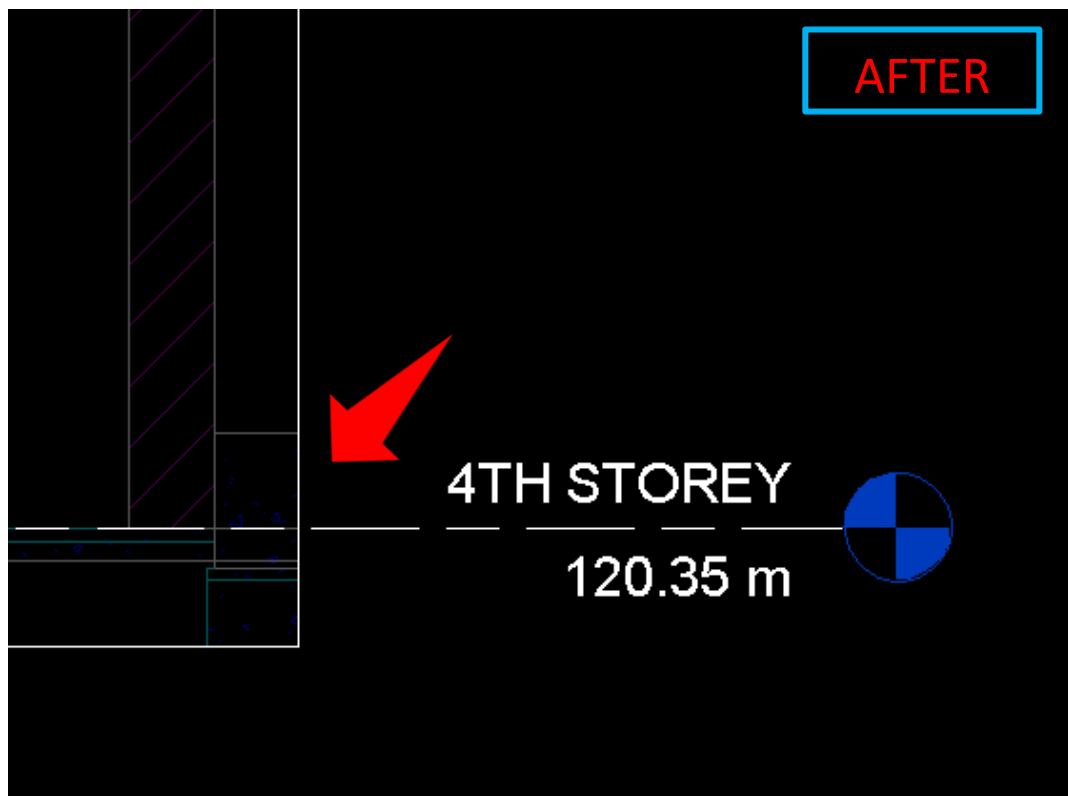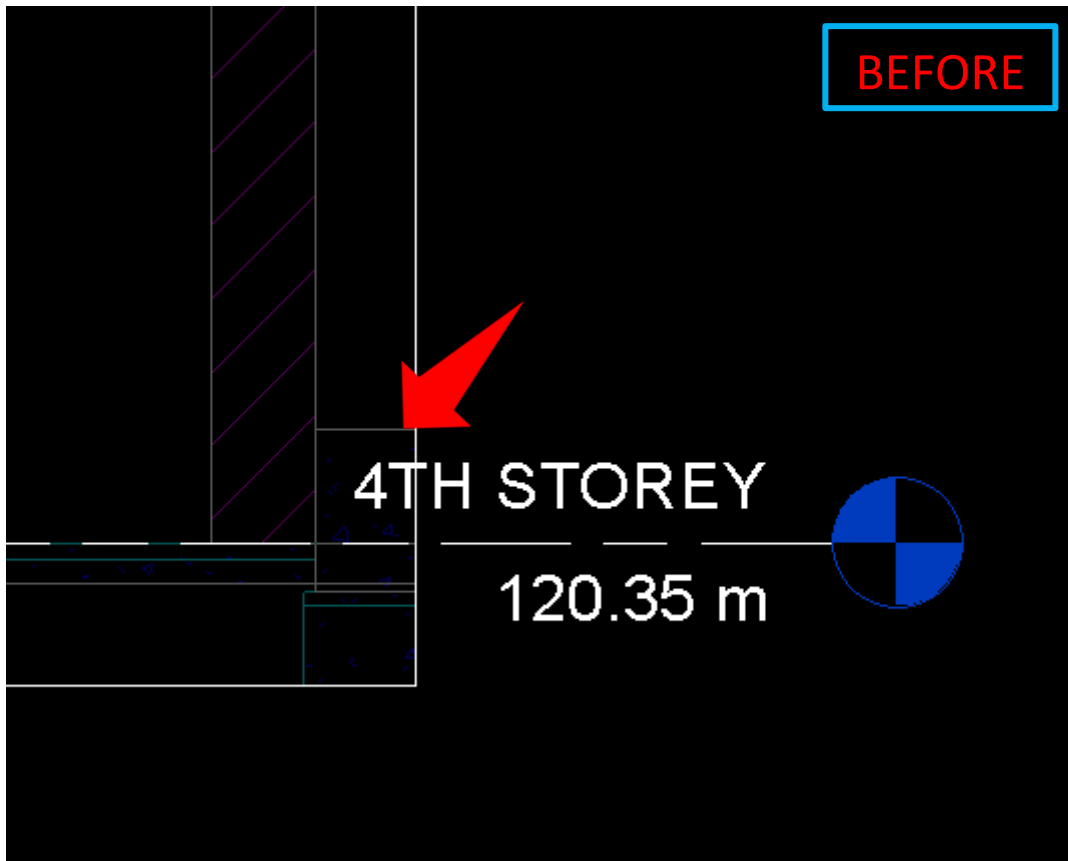

Answer/Solution/Advise