



Workaround to see the Piping Attributes in Navisworks (NWD created from SPR vue files)

Issues: Piping Attributes are not visible in the Properties page of Navisworks model

Equipment and Structures: No issues

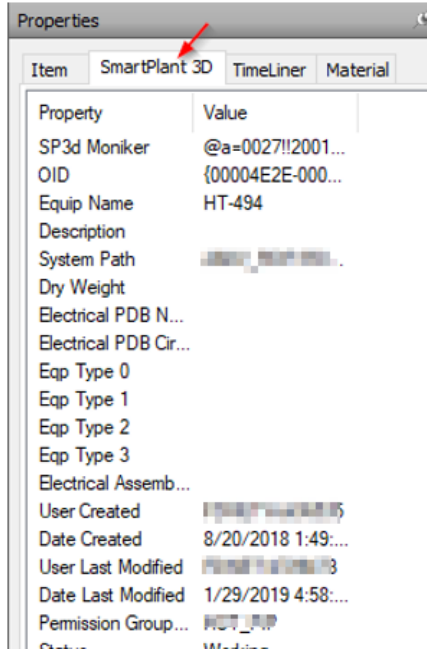


Piping:

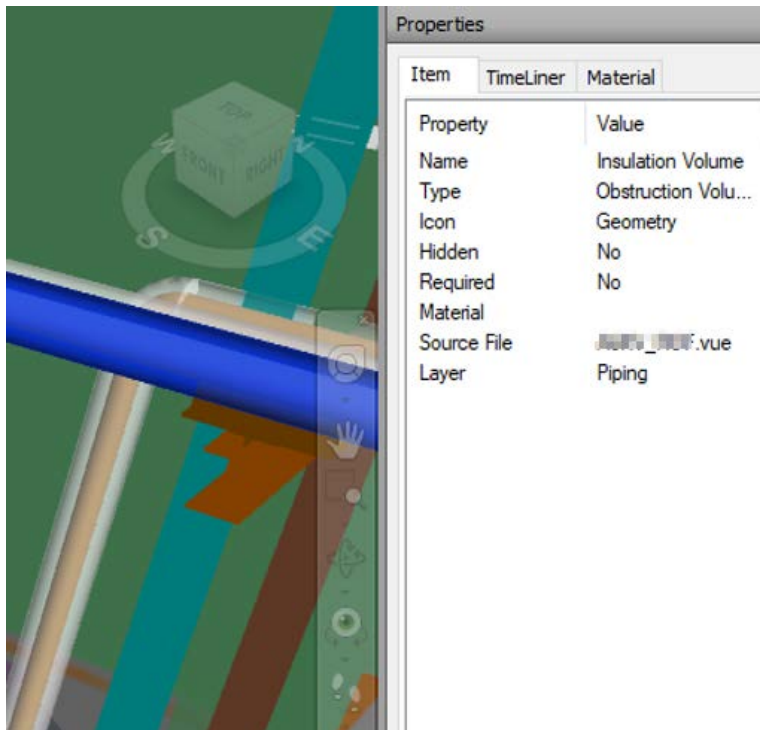


**Solution to view the Piping properties:**


- 1) Right click and Select “Selection Inspector”

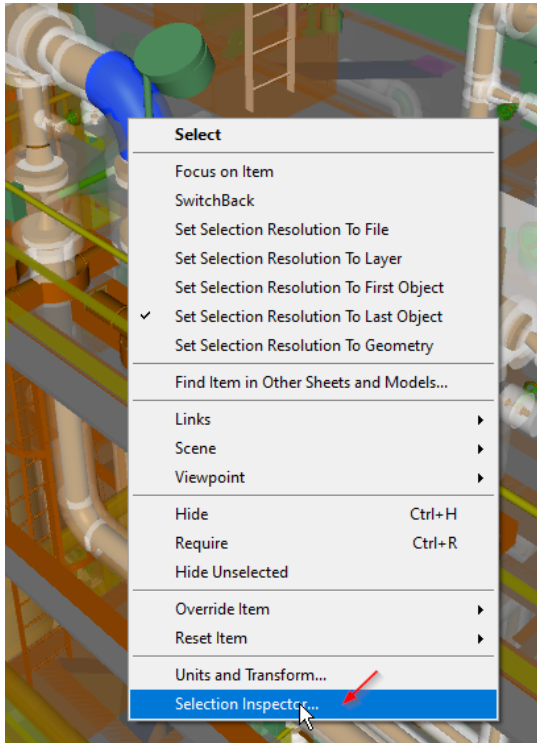


Make sure that selection is set to “Set Selection Resolution to Last Object” or to “Geometry”

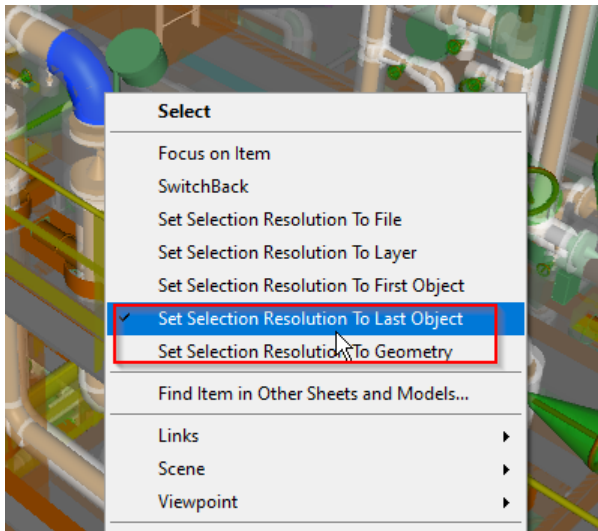

- 2) Select “Quick Property Definition”

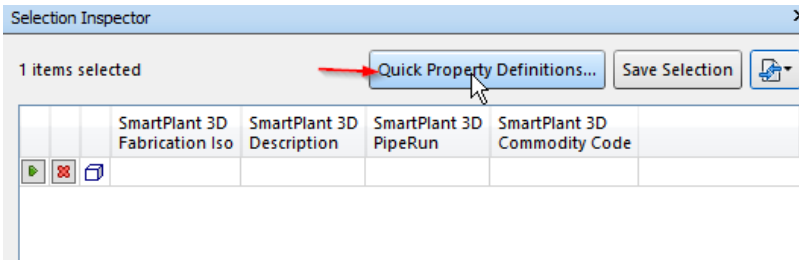

- 3) Click the green (+) button to add a property
  - a. In the Category field, select "SmartPlant 3D"
  - b. In the property field, select the S3D properties you want to see or add.
  - c. Keep adding the properties as you want. Select ok when done.

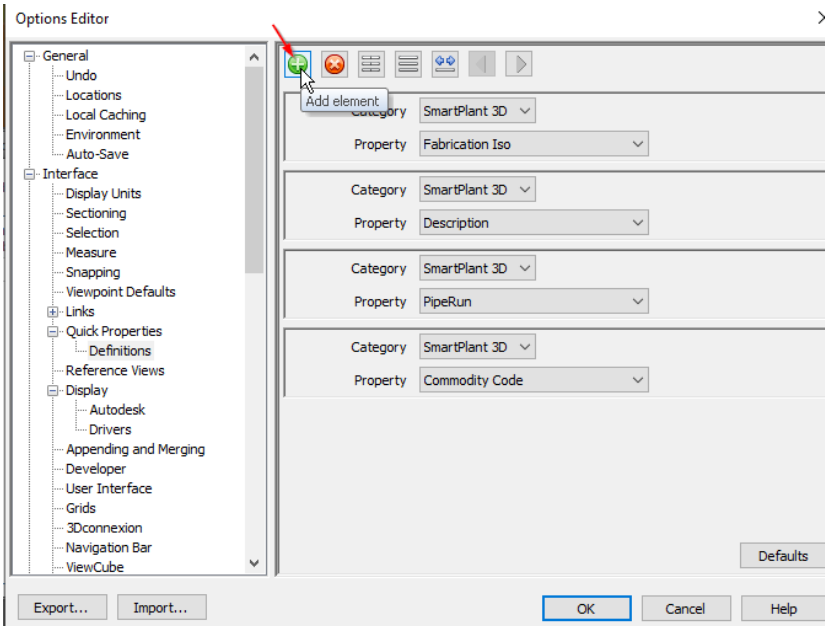

- 4) As you hover to the objects in the main view, the tool tip will show the attribute you just added. See examples below.

