




STEP 1.

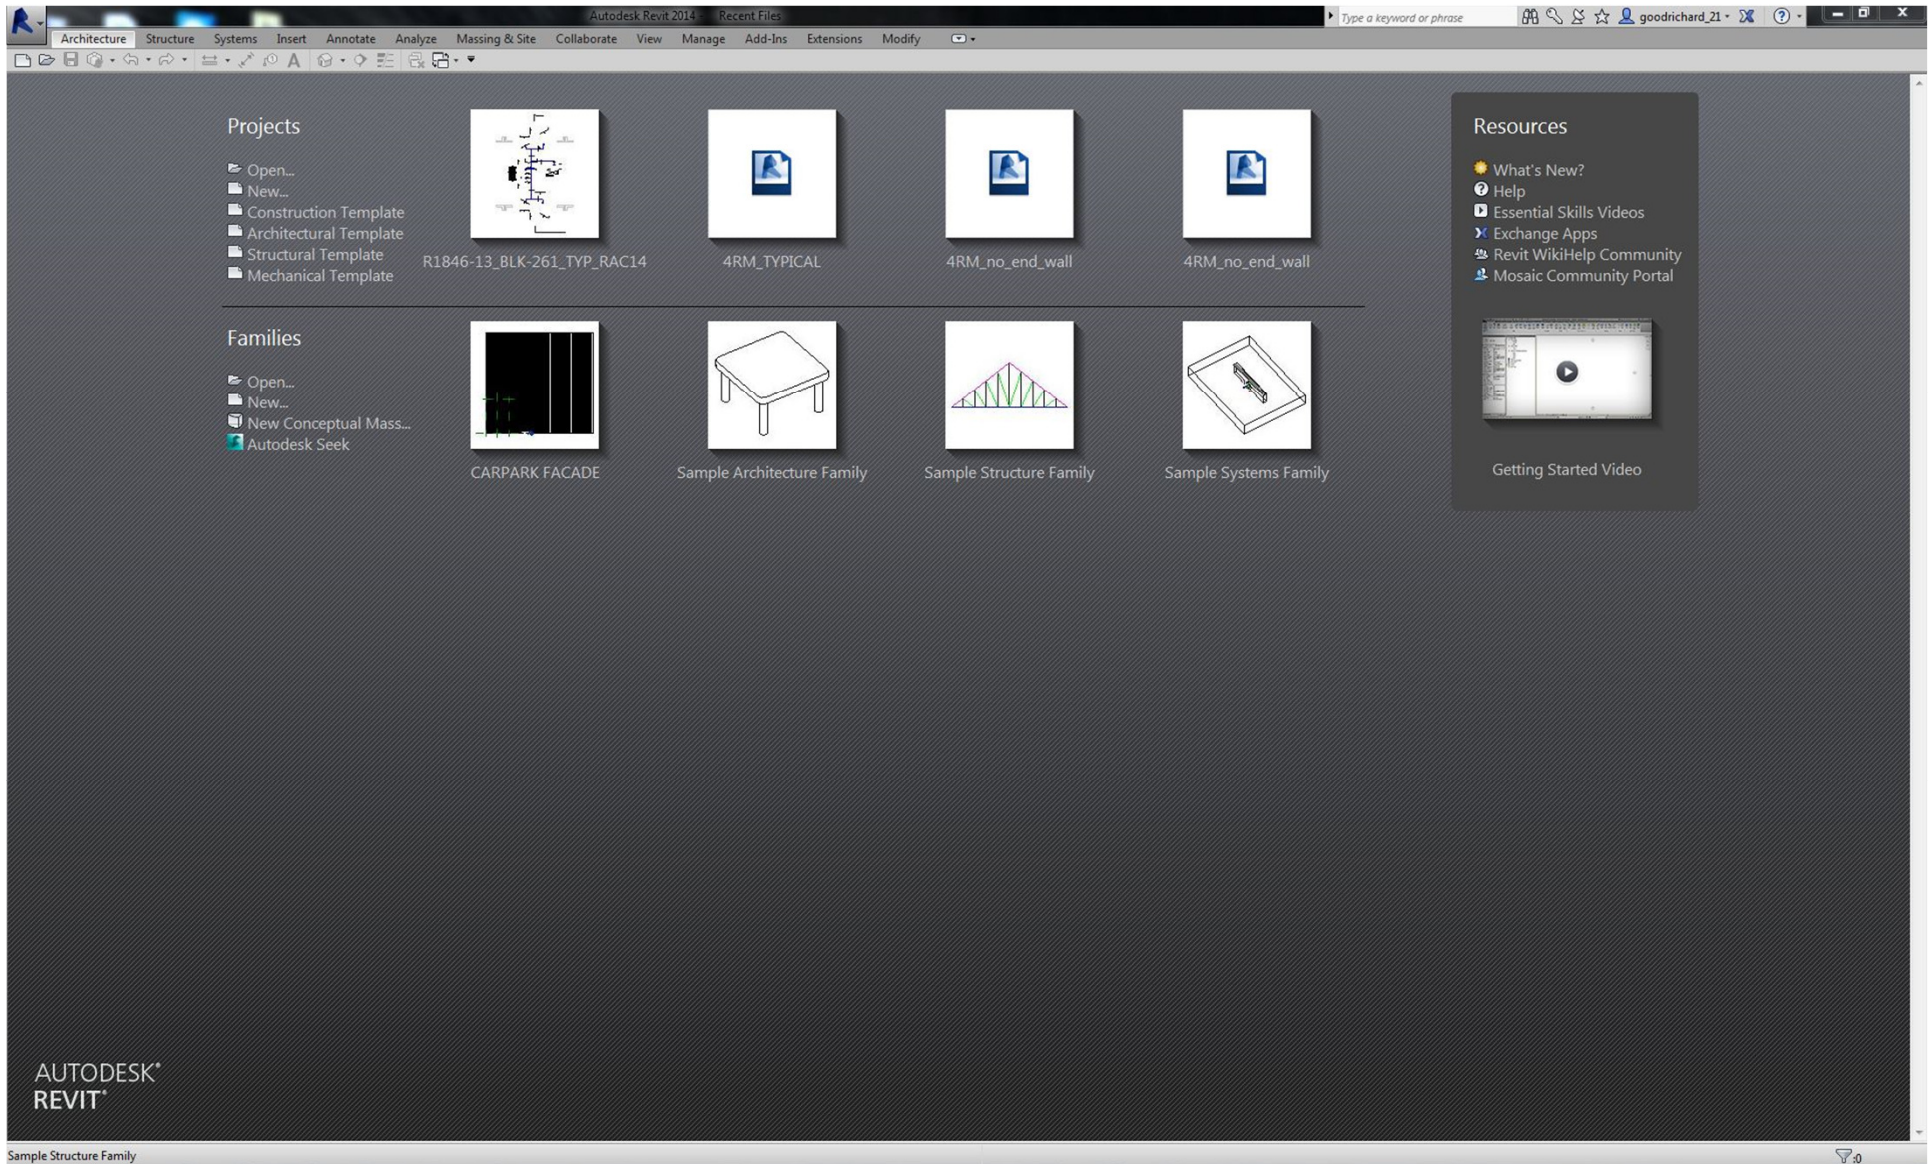


STEP 2. Open the file 4RM_TYPICAL

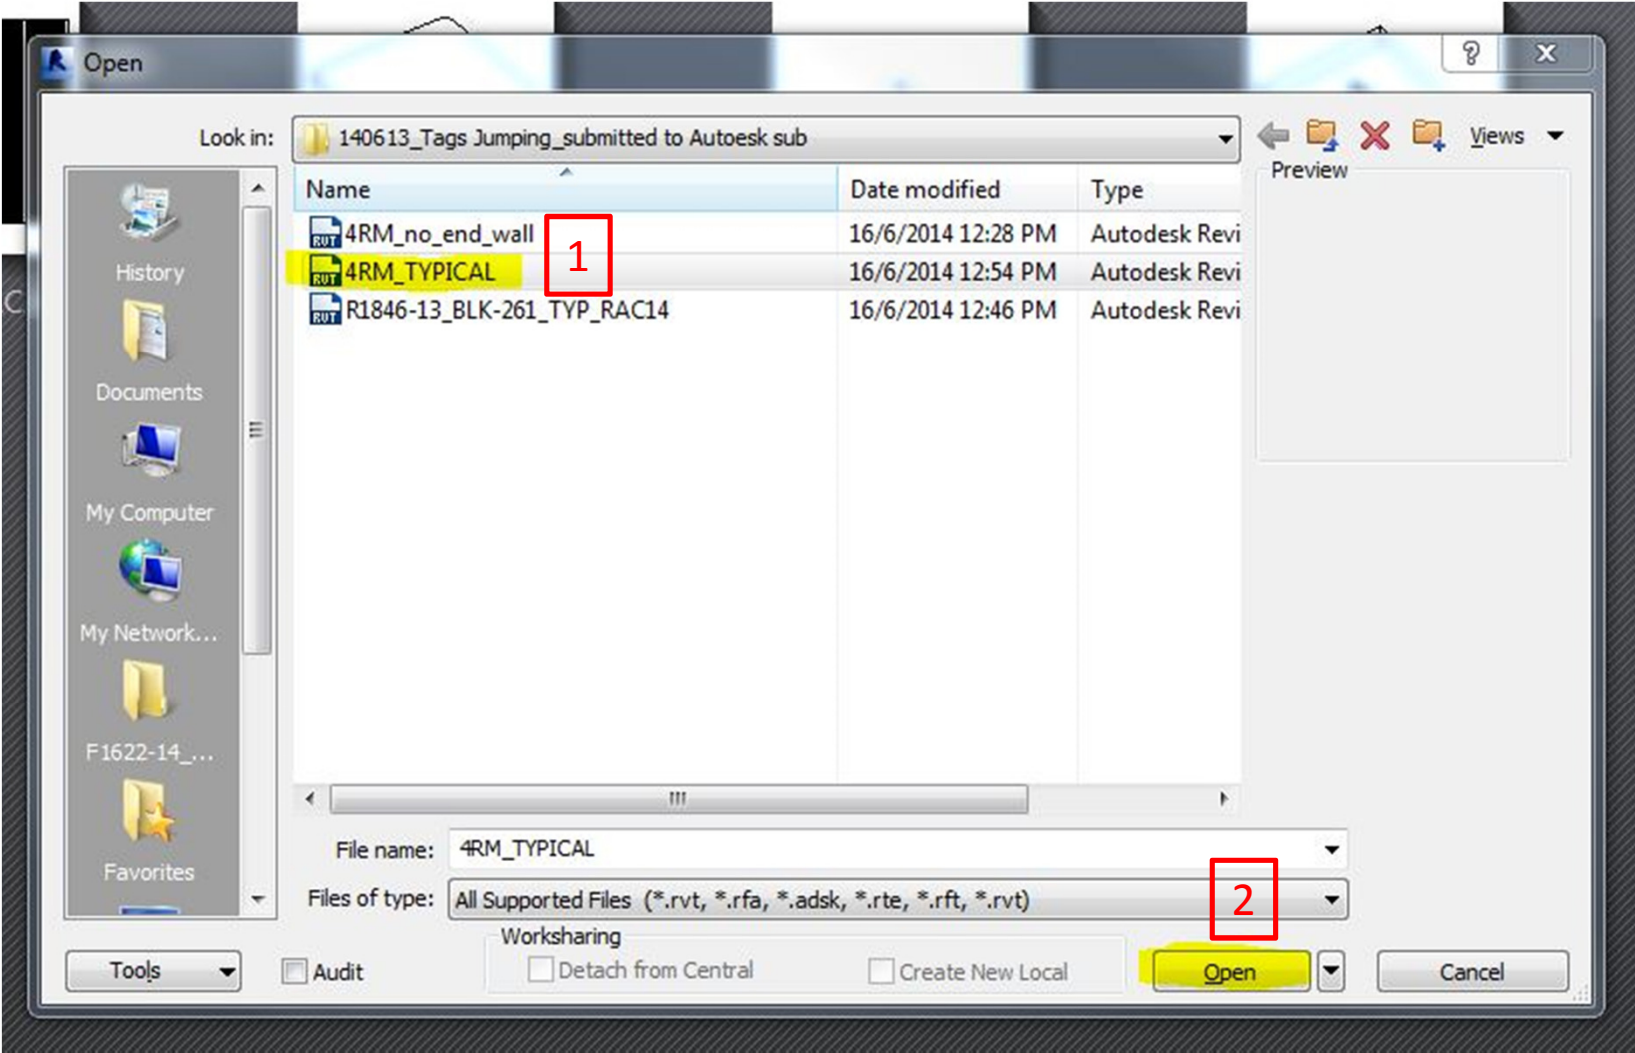


STEP 3. After opening the 4RM_TYPICAL file, go to Import/Link RVT, link 4RM_no_end_wall file using the positioning Auto-Origin to Origin then Open.

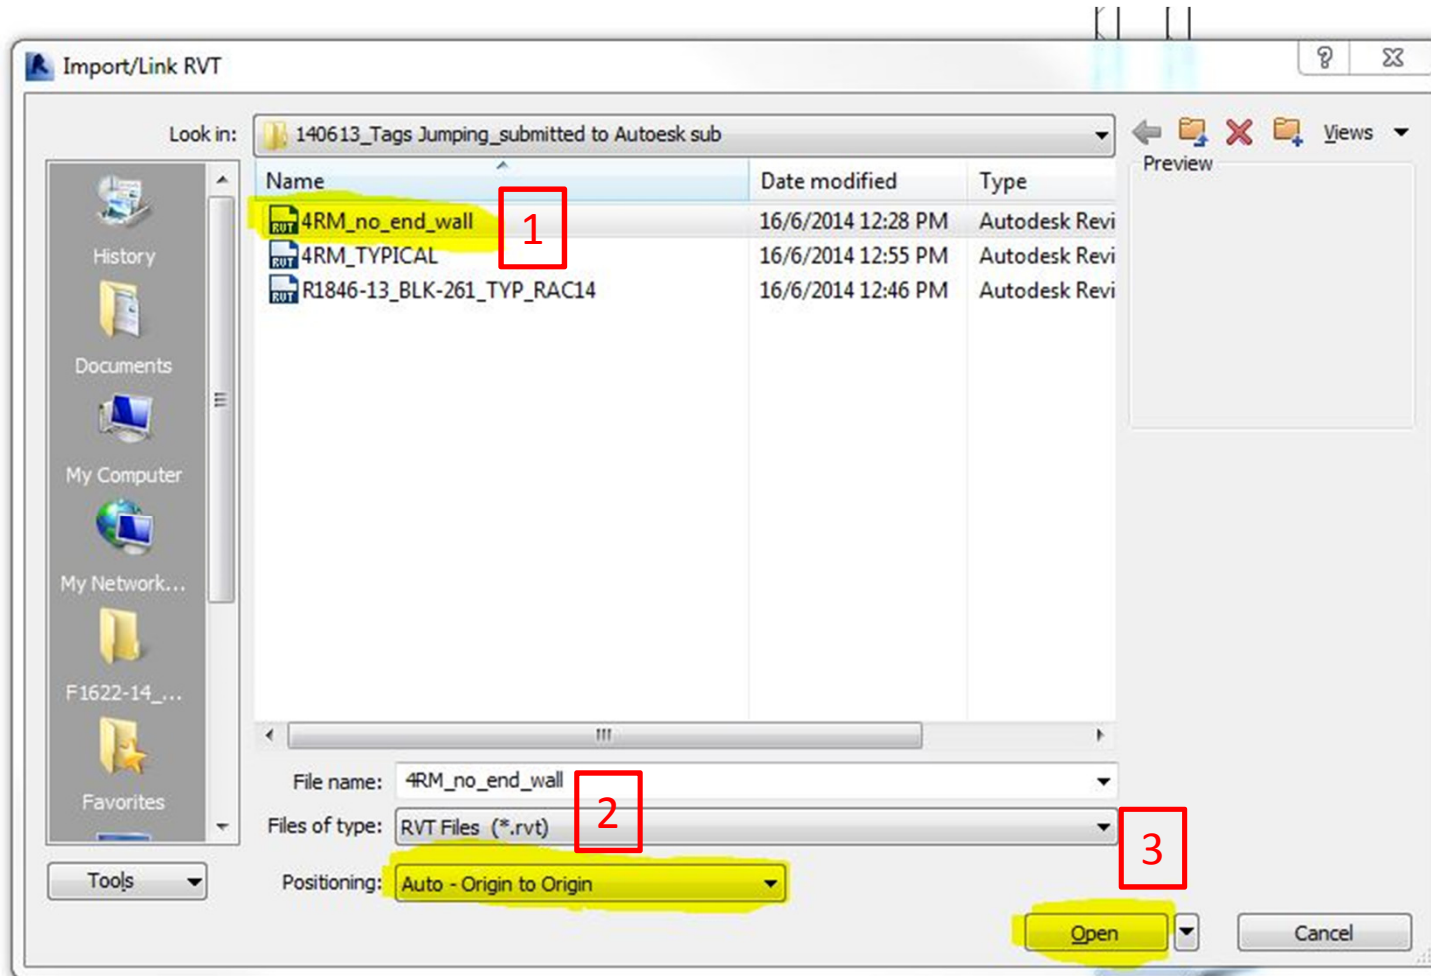


STEP 4. After linking the 4RM-no_end_wall to the file, go to Visibility/Graphic Overrides, Revit Links tab, then select By Host View. From the RVT Link Display Settings, Basic Tab, select the By linked view button. Select Floor Plan: Base level_annotation_CHECK from the Linked View, then OK.

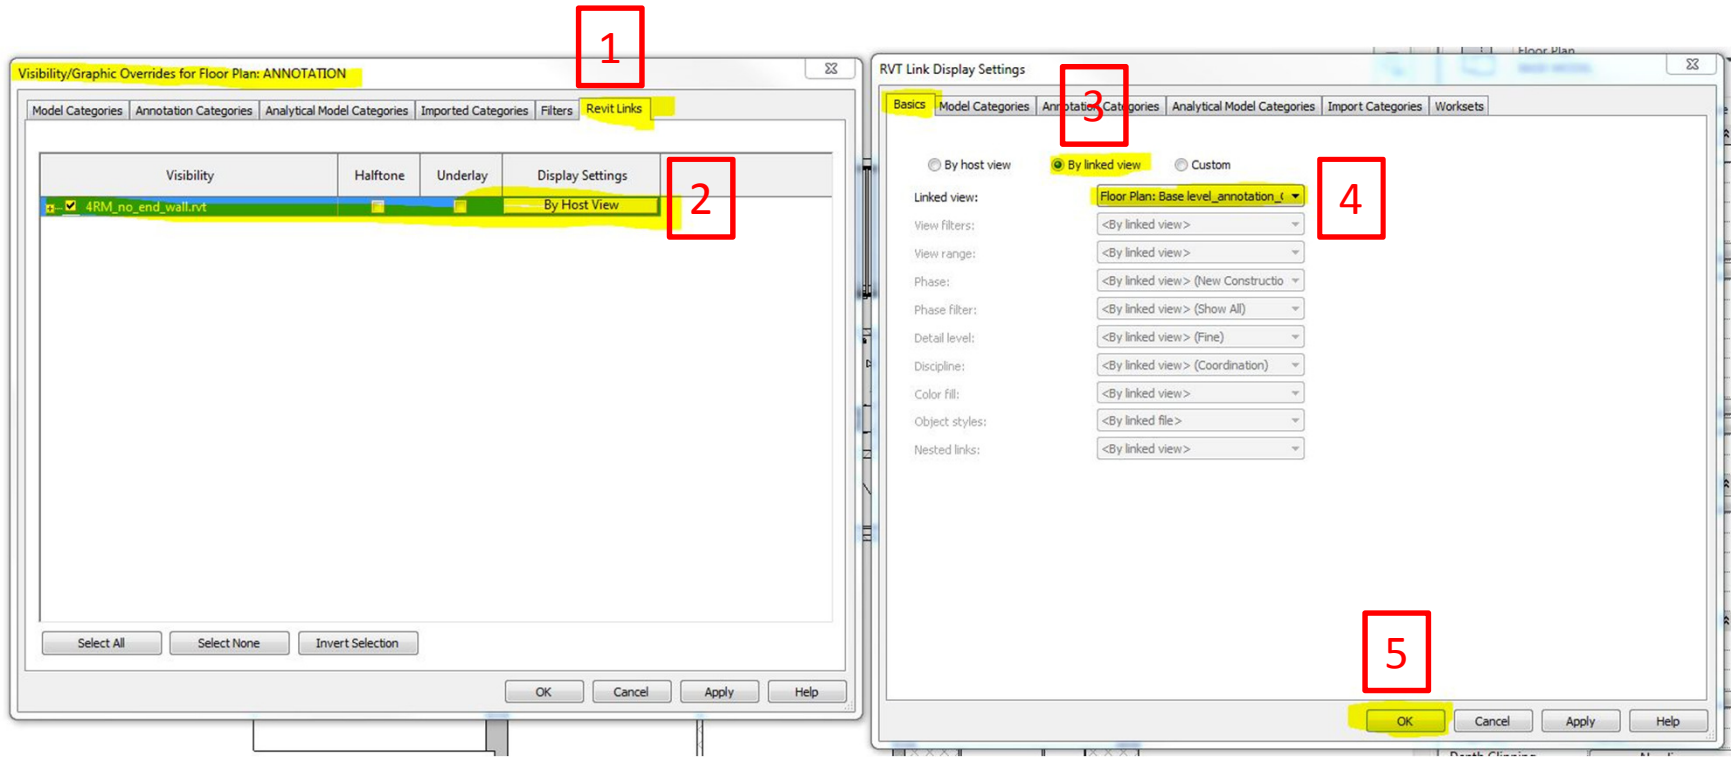


STEP 5. Notice that it now becomes By Linked View from the Display Settings, select OK.

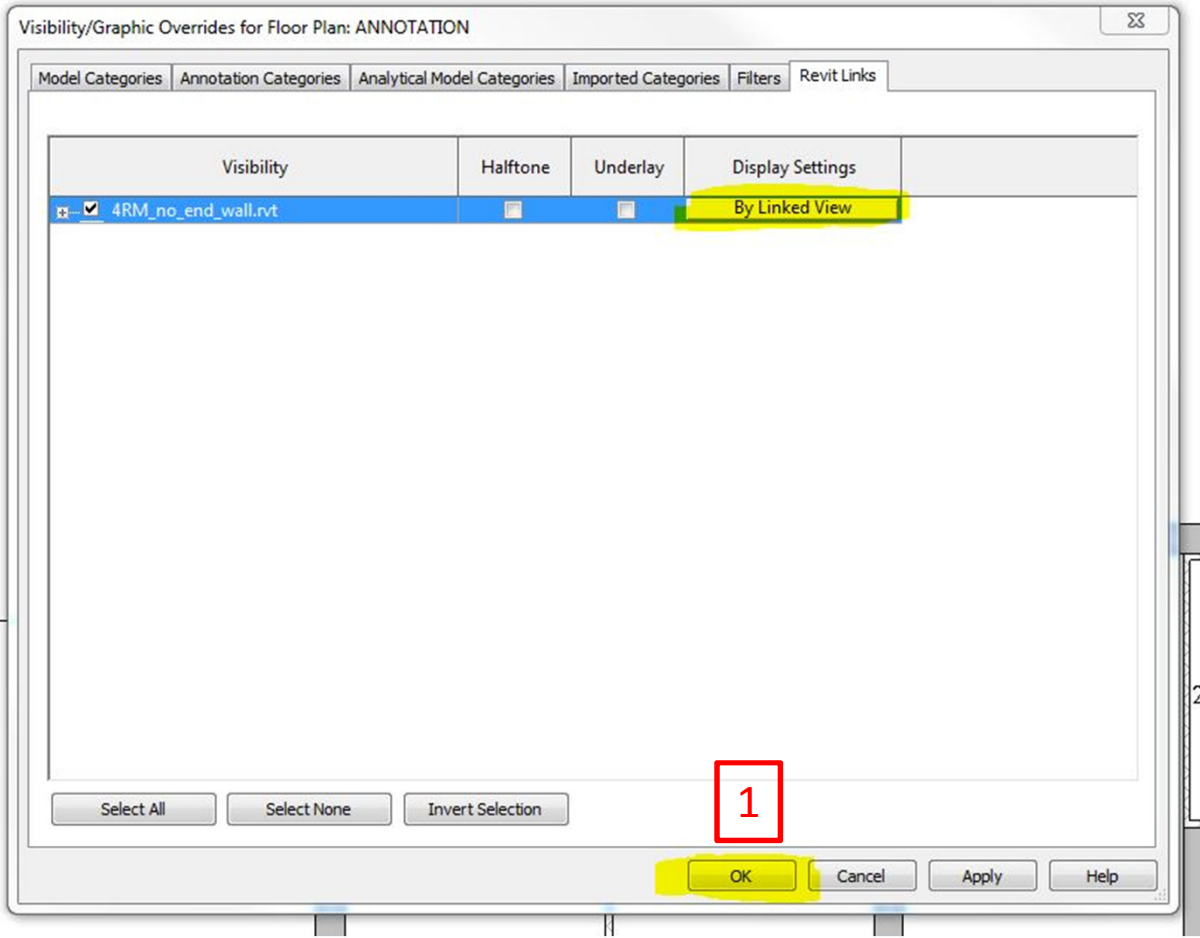


STEP 6. To change the Reference Type of the link model, go to Manage Links. From the Revit tab, select Attachment from the Reference Type then select OK.

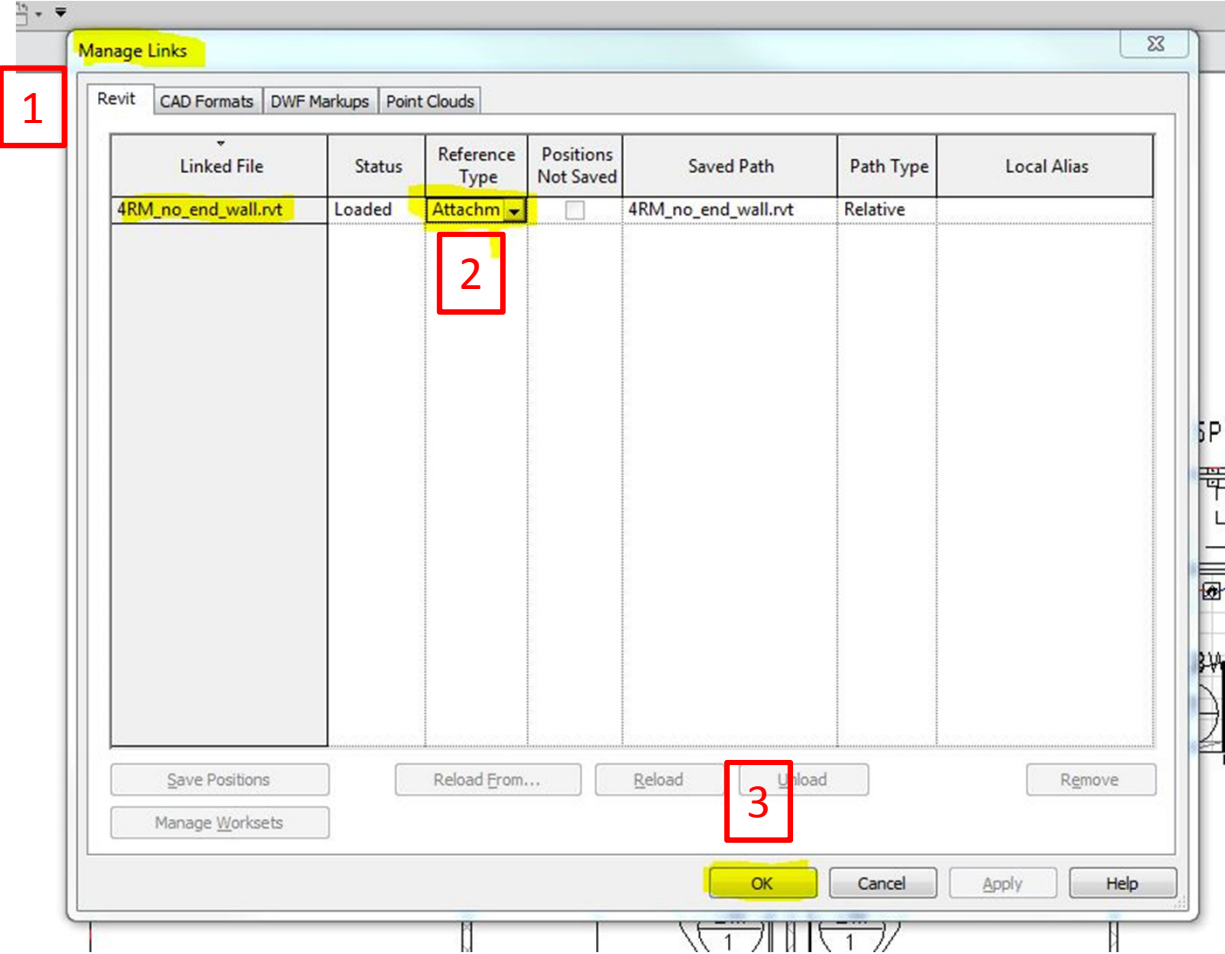


STEP 7. Save the file and close.

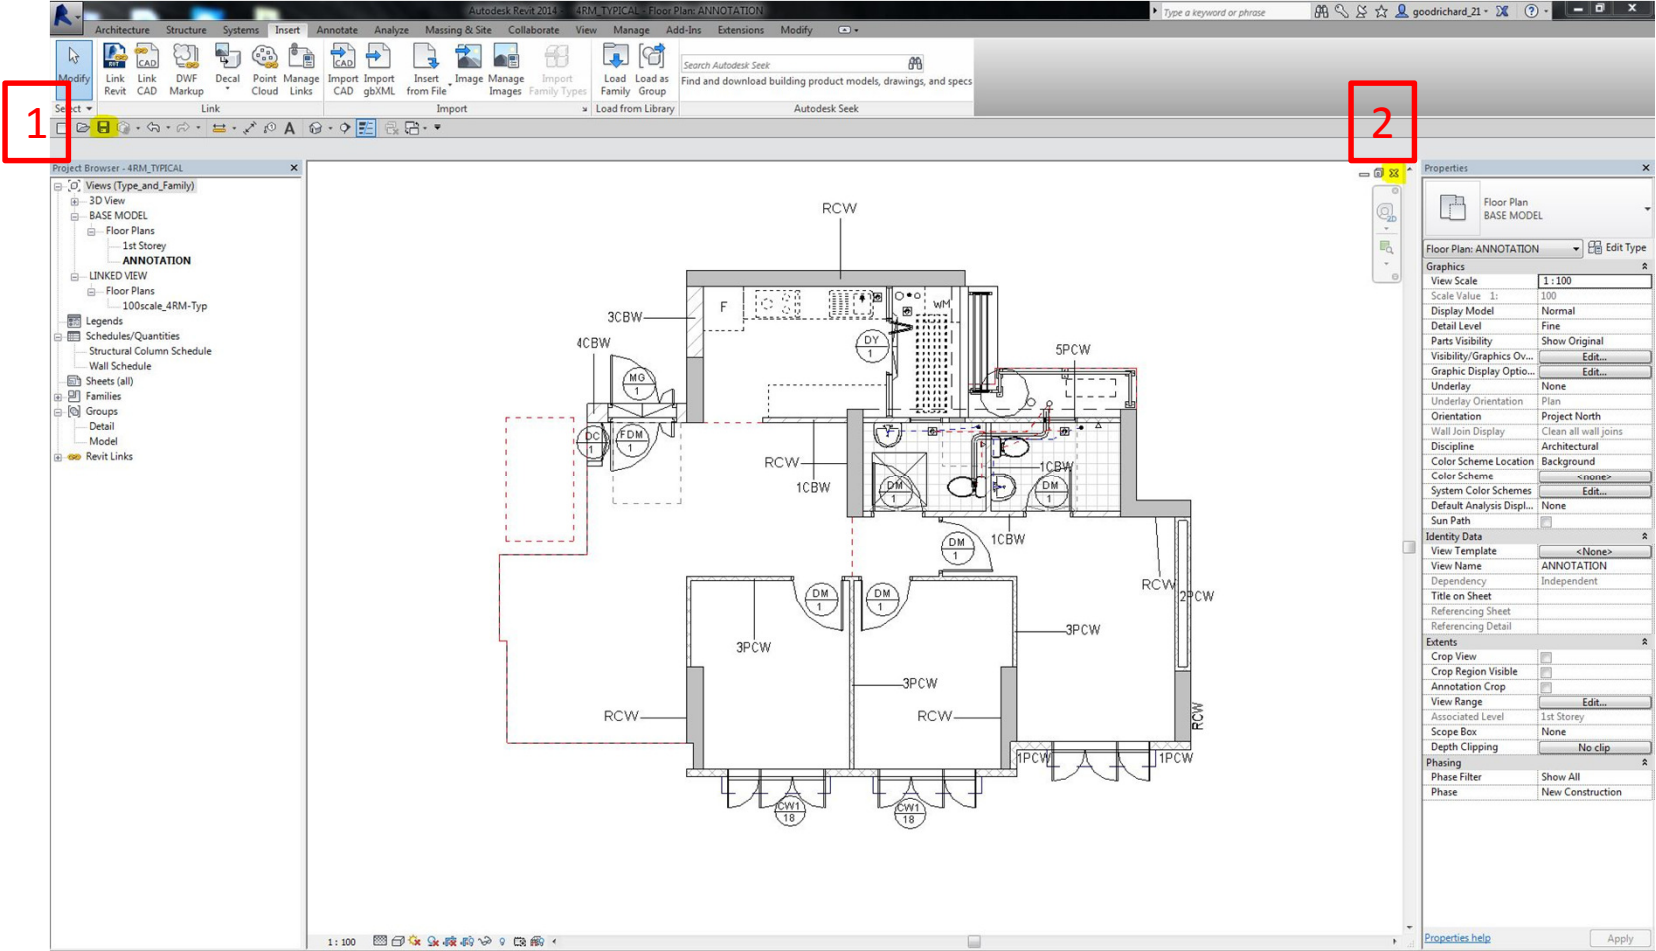

STEP 8. Open the file R1846-13_BLK-261_TYP_RAC14.

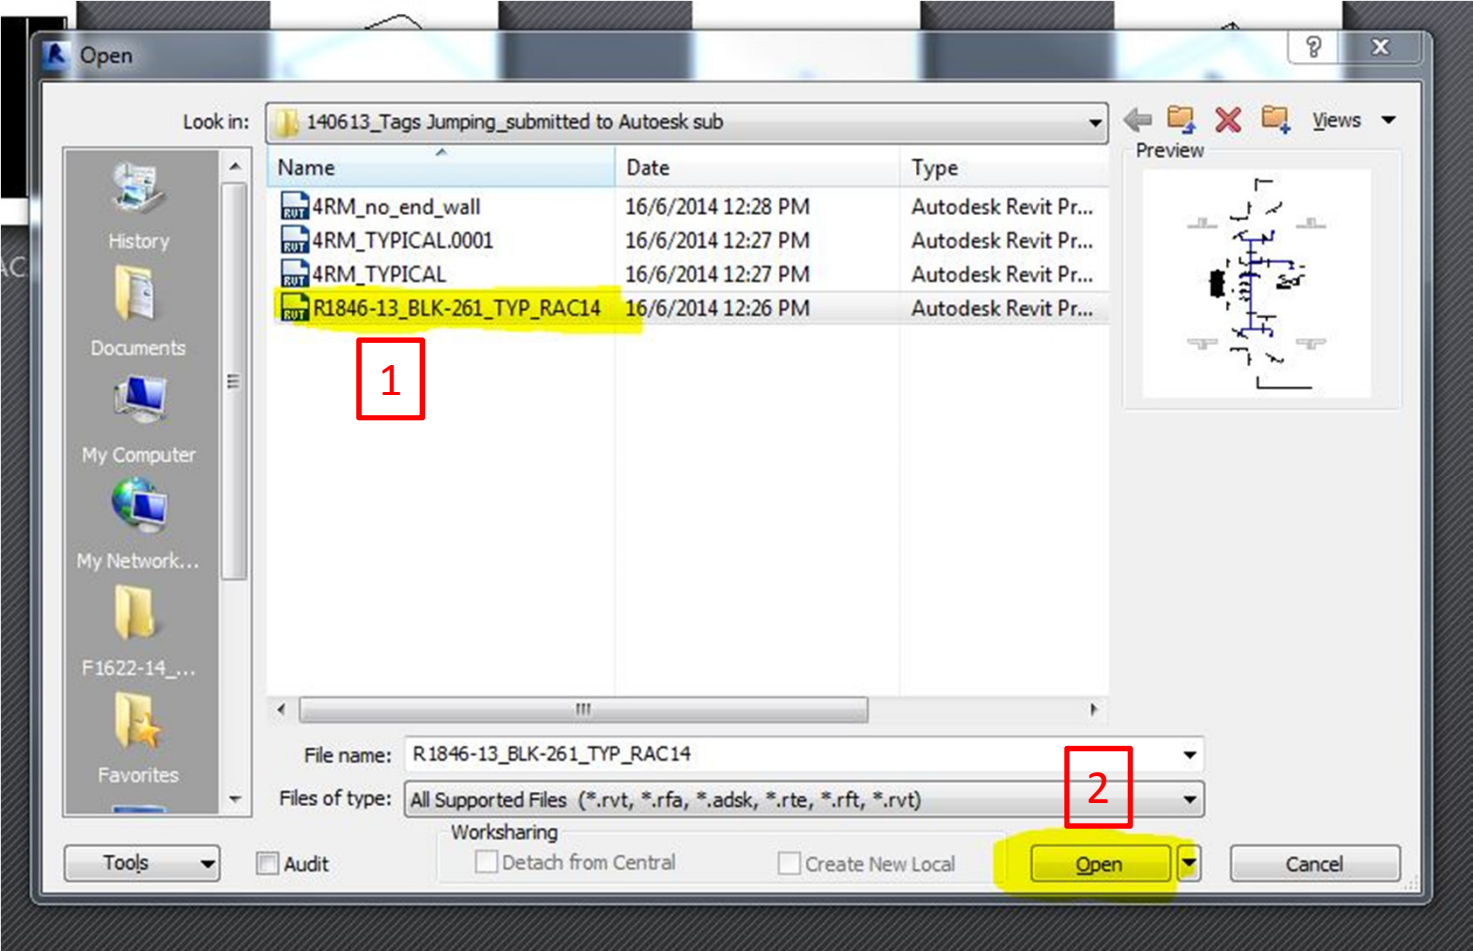

STEP 9. After opening the file, go to Manage Links then select the 4RM_Typical then Reload From. From the Add Link dialog box, select 4RM_TYPICAL then open.

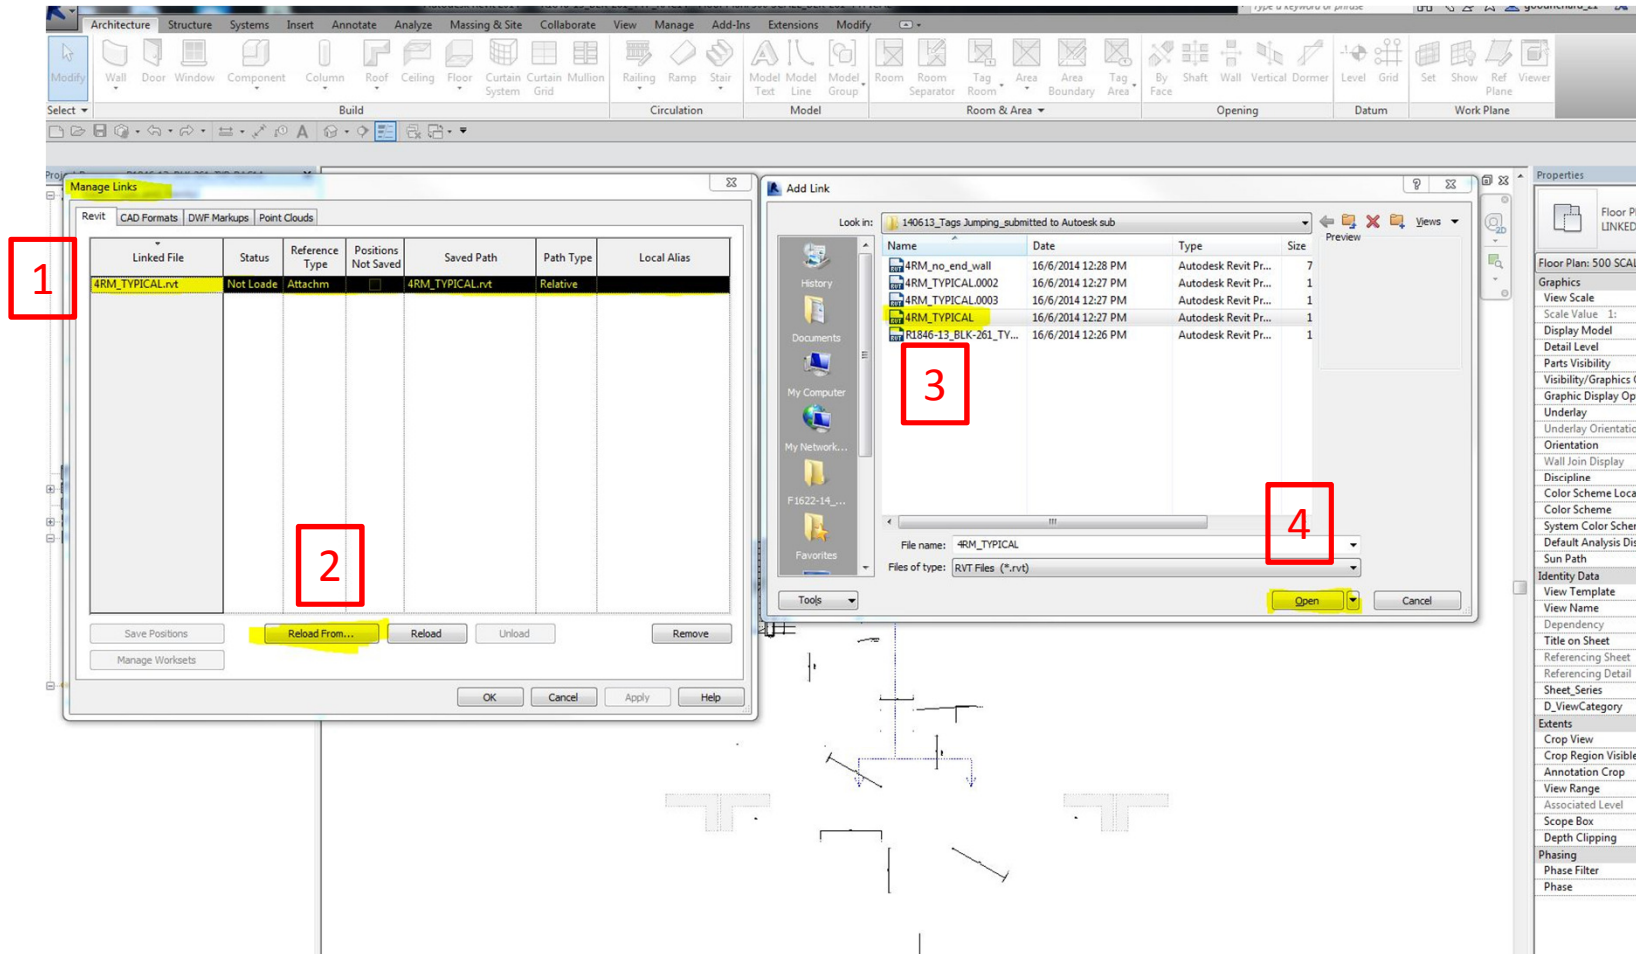

STEP 10. After loading the file, notice that the tags (highlighted) is not in proper place unlike the placement of tags in the lower portion. That is the problem.

