




1) MODEL.dwg

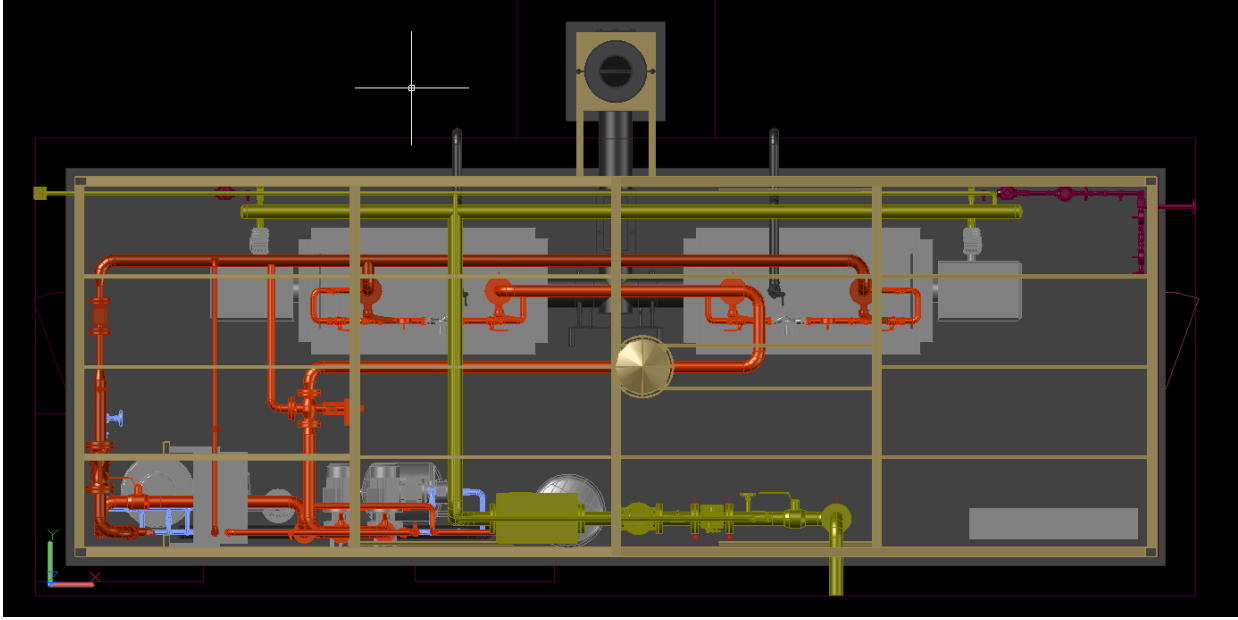

2) I make new file: ortho.dwg and insert XREF - MODEL.dwg. Xref was made like attachment. And turn off some layers in ortho.dwg.

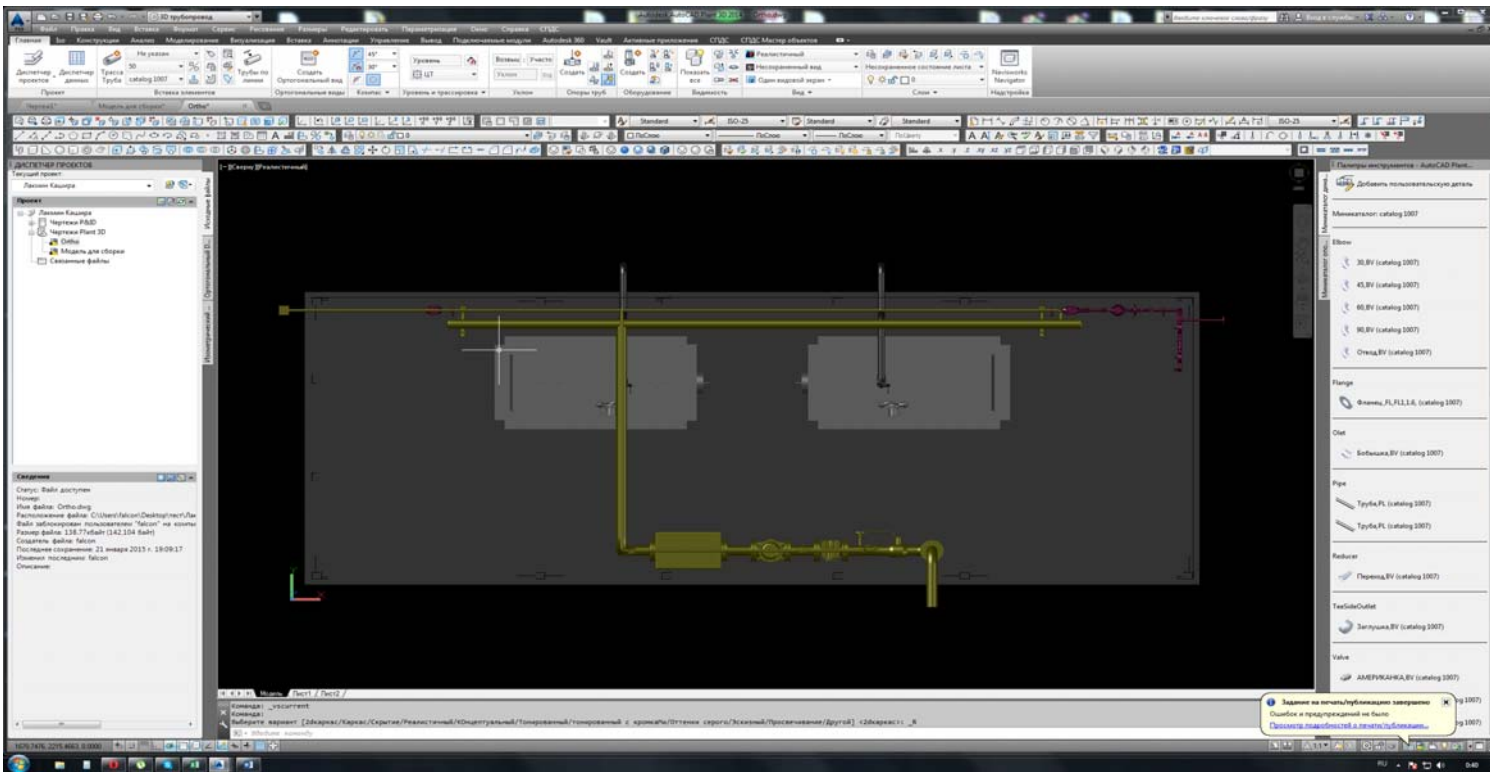

3) And then I extract orthodrawing from ortho.dwg (I hope that ortho.dwg will keep my state of layers) But I see whole model like in file MODEL.dwg)

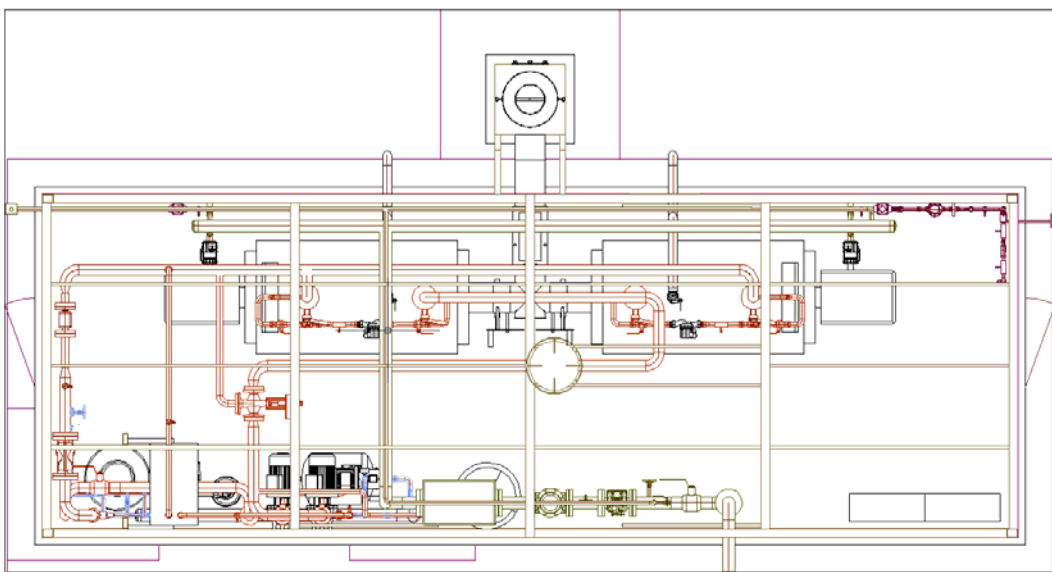

What I've make wrong? Please help me!)