


How do you THIS?  
 SURVEYING MEMBLY?

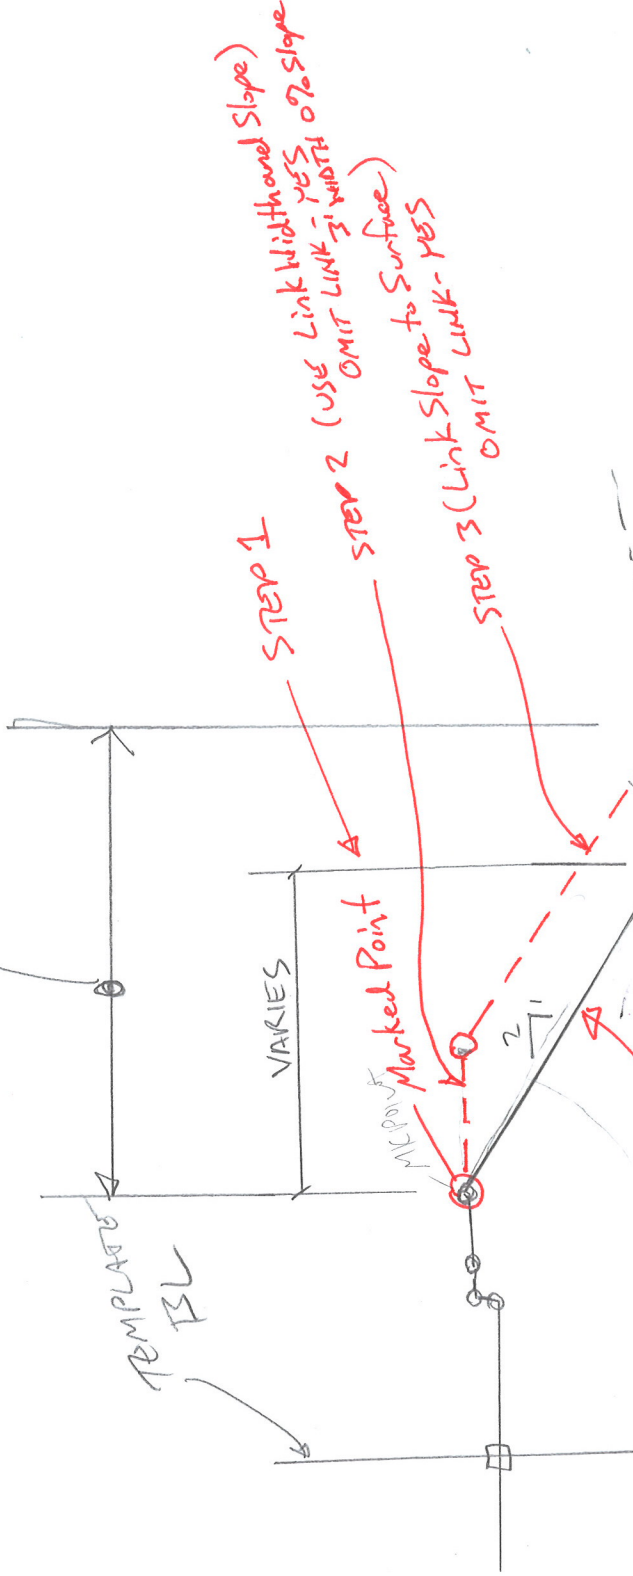

STEP 1  
 LINK WITH HAND Slope  
 USE LINK WITH HAND Slope  
 OMIT LINK WITH HAND Slope

STEP 2 (USE LINK WITH HAND Slope)  
 OMIT LINK WITH HAND Slope

STEP 3 (LINK Slope to Surface)  
 OMIT LINK WITH HAND Slope

STEP 4 USE  
 LINK WITH HAND Slope  
 FOR BOTH DITCH SIDES

STEP 5  
 Link to Marked Point  
 (SEE MY SURVEY  
 SHOT ON HOW IT  
 ASSEMBLY LOOKS)

attach here  
 make sure  
 marked point name  
 is the same as marked point name in Step 1