

Q1. HOW TO ADD THIS GRADE BREAK

LOW PT STA: 0+71.350
 LOW PT ELEV: 17.900
 PVI STA: 0+037.600
 PVI ELEV: 17.900
 K: 45.000
 LVC: 67.500


Q2. HOW TO CREATE MULTIPLE PROFILE IN ONE BAND SET (AS SHOWN MANUALLY)

Q3. HOW TO SHOW ELEVATION DIFFERENCE BETWEEN TWO PROFILES

Q4. HOW TO ADD THIS STATIONS AND ELEVATIONS

Q5. HOW TO AVOID THIS OVERLAP

DATUM=15.00

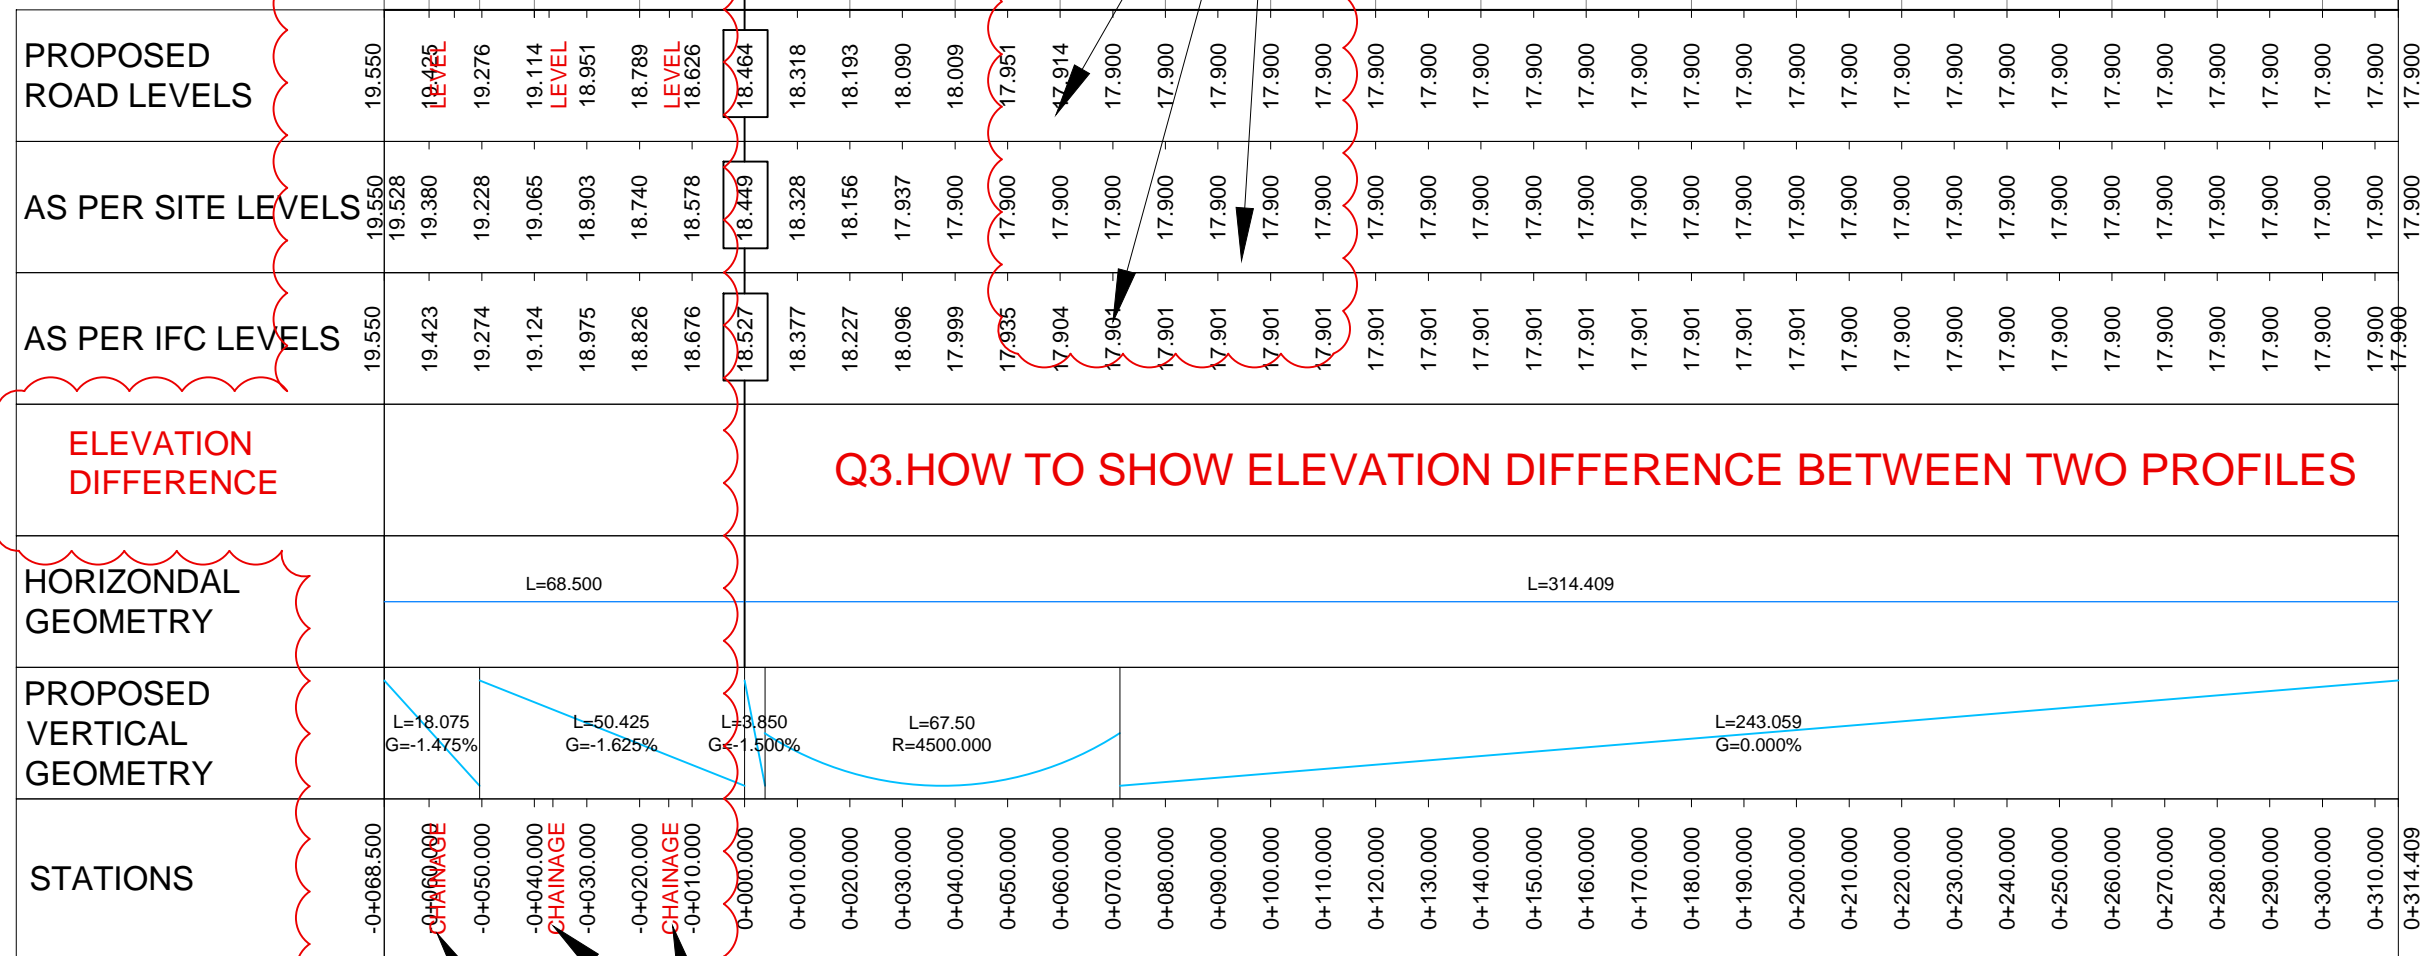

GRADE BREAK STA: -0+068.500
 ELEV: 19.550

GRADE BREAK STA: ???
 ELEV: ???

BVCS: 0+003.850
 BVCE: 18.406

EVCS: 0+071.350
 EVCE: 17.900

GRADE BREAK STA: 0+314.409
 ELEV: 17.900

CHAINAGE

CHAINAGE

CHAINAGE

L=18.075
 G=-1.475%

L=50.425
 G=-1.625%

L=3.850
 G=-1.500%

L=67.50
 R=4500.000

L=243.059
 G=0.000%

L=68.500

L=314.409