


## Adding Superscript Text with AutoCAD 2014

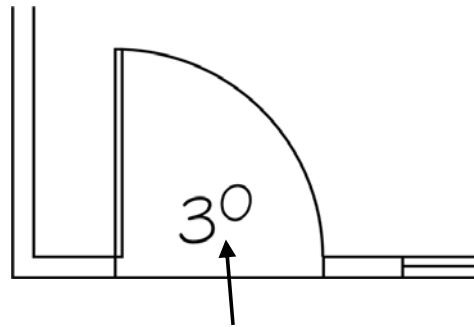

The steps involved in adding Superscript text to the Guest Cottage's doors using AutoCAD 2014's *In-Place Text Editor* are shown below.

Desired text including Superscript

**Step 1.** Use **Multiline Text** tool to enter text as shown here. **Note:** Type ^ by holding down **Shift key** and typing 6.

**Step 2.** Highlight these characters.

**Step 3.** Pick on the **Formatting** panel's down arrow and select **Stack** from menu. The zero should convert to superscript.