



EXAMPLE OF WHAT IS HAPPENING:

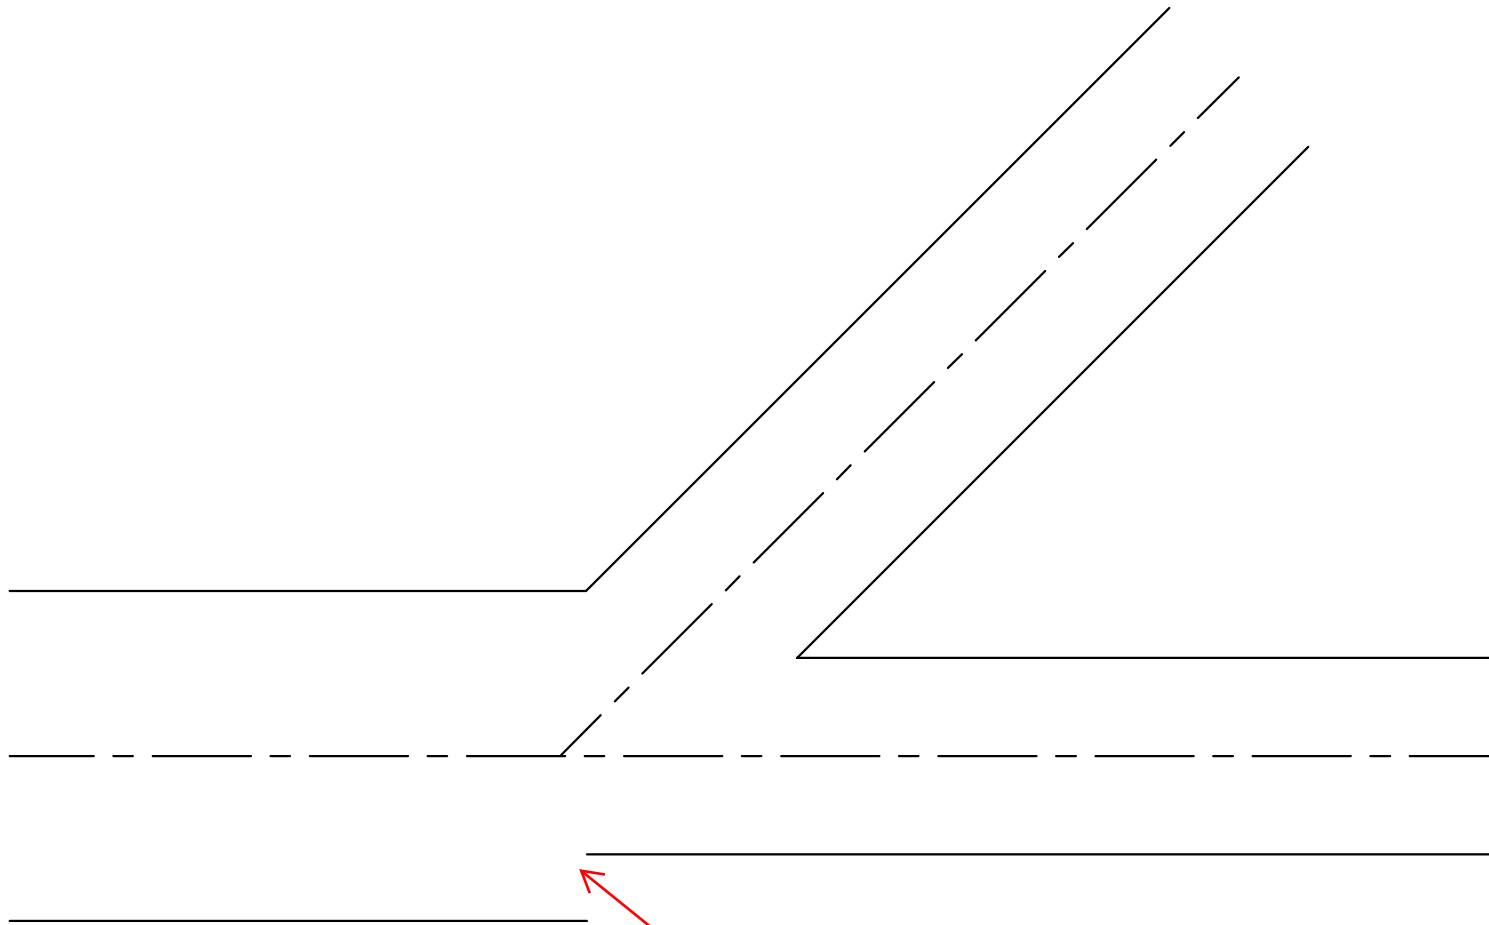

When i try and make two concrete box culverts merge into a larger width culvert it looks like this in plan view.

EXAMPLE OF WHAT I NEED IT TO LOOK LIKE AT THE INTERSECTION:

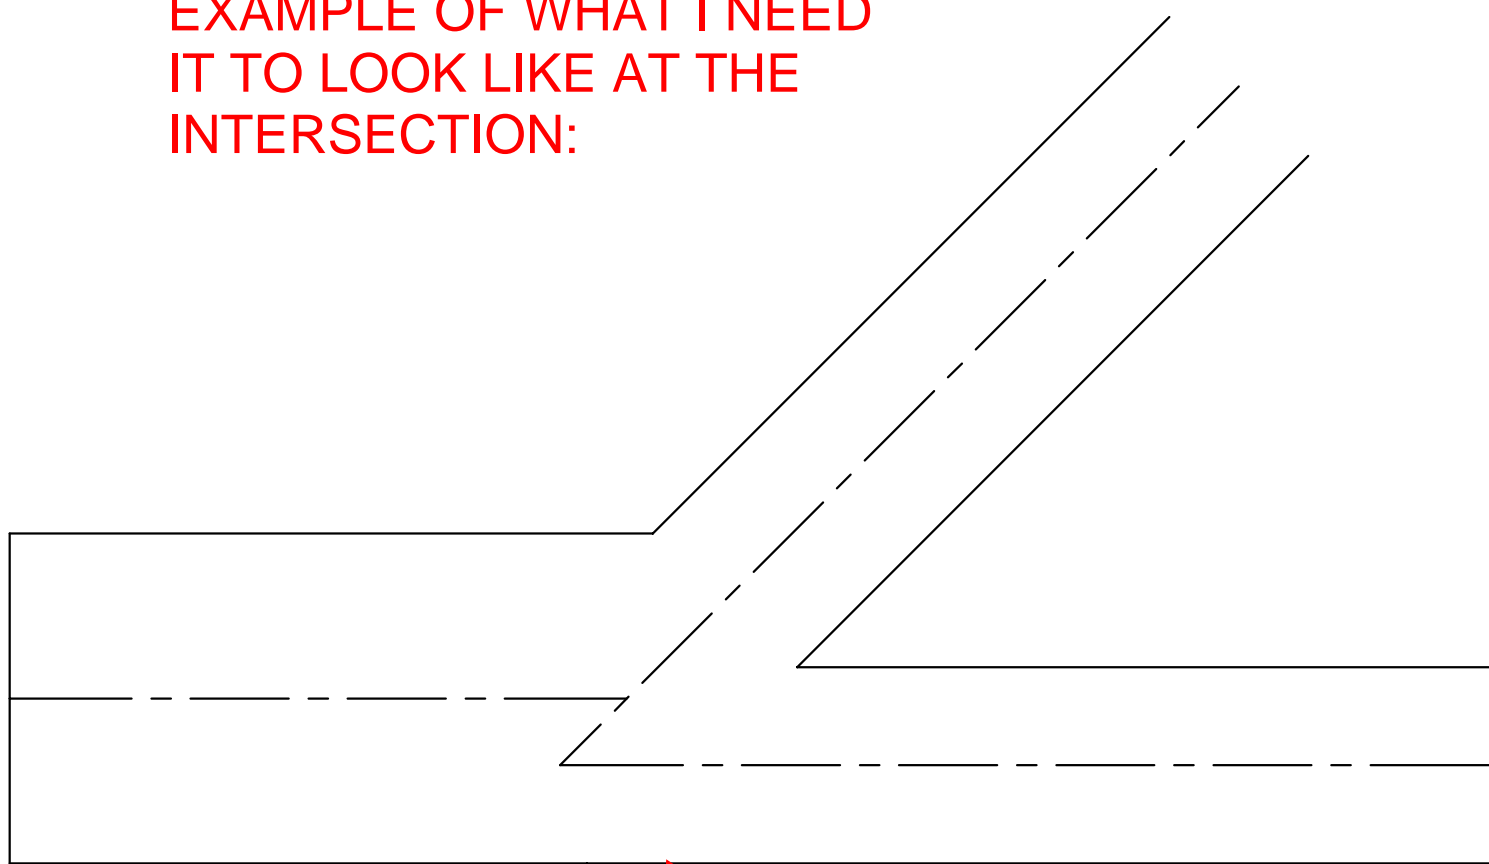

ultimately i need it to look like this. Where the two culverts merge into a larger culvert that doesn't "smart connect" at the centerline...