


AutoCAD on OsX


Part One

Loading Fonts for Counterbore, Countersink & Depth in OsX

Step One: Create some Mtext

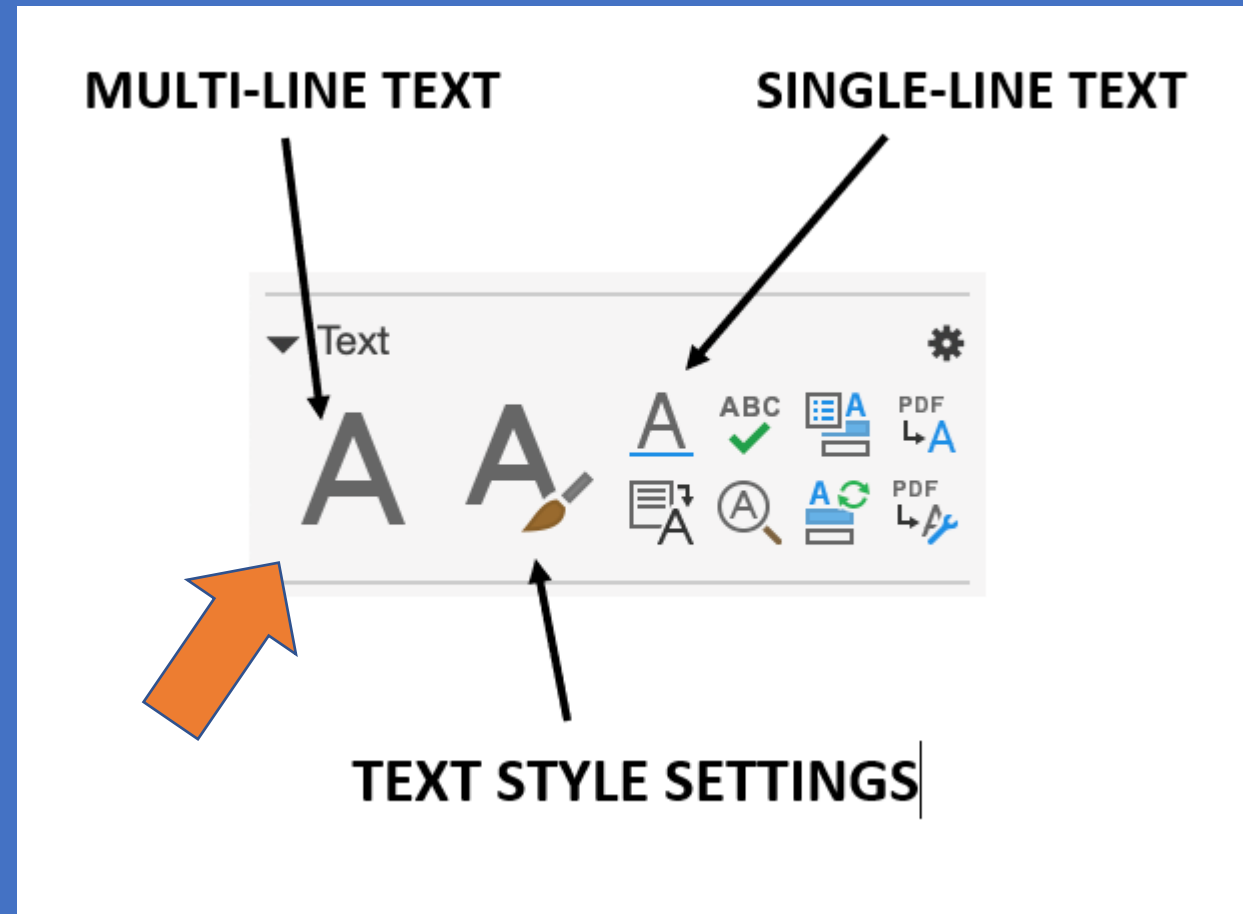


Step Two: Right-click Mtext to get Text Editor

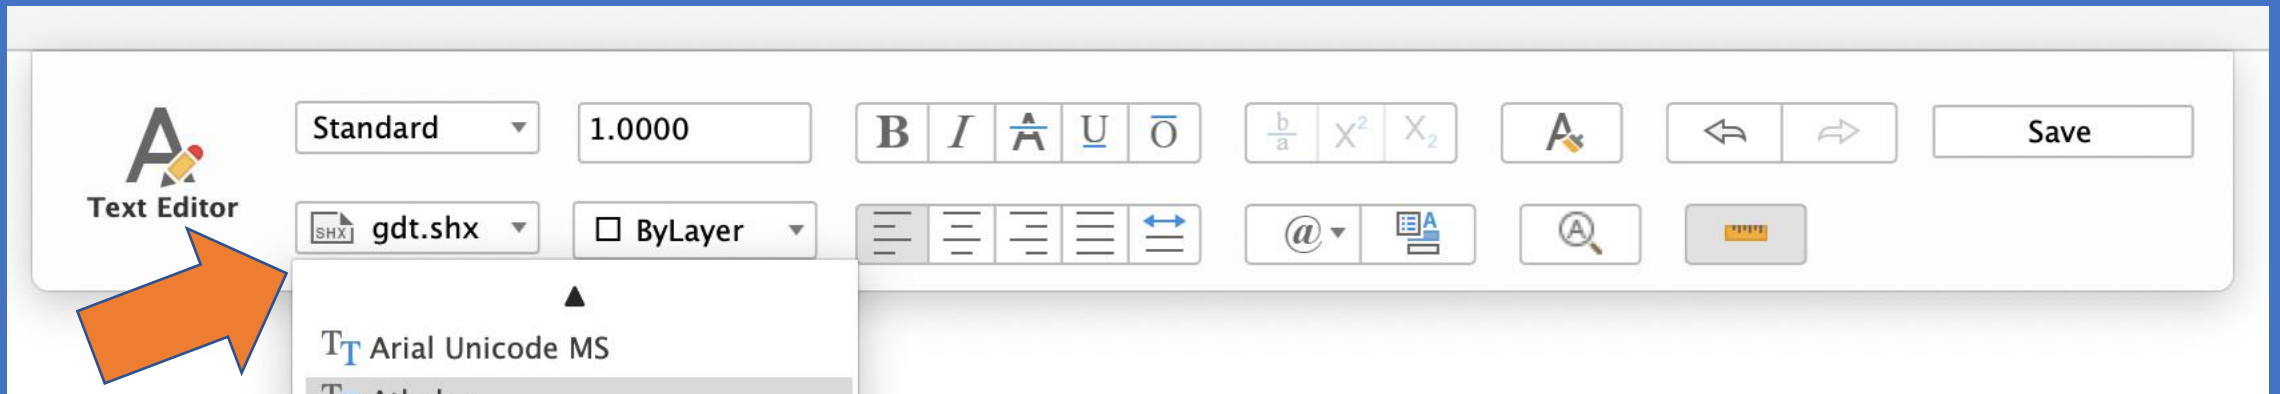


Scroll thru flyout list to gdt.shx

Step Three:

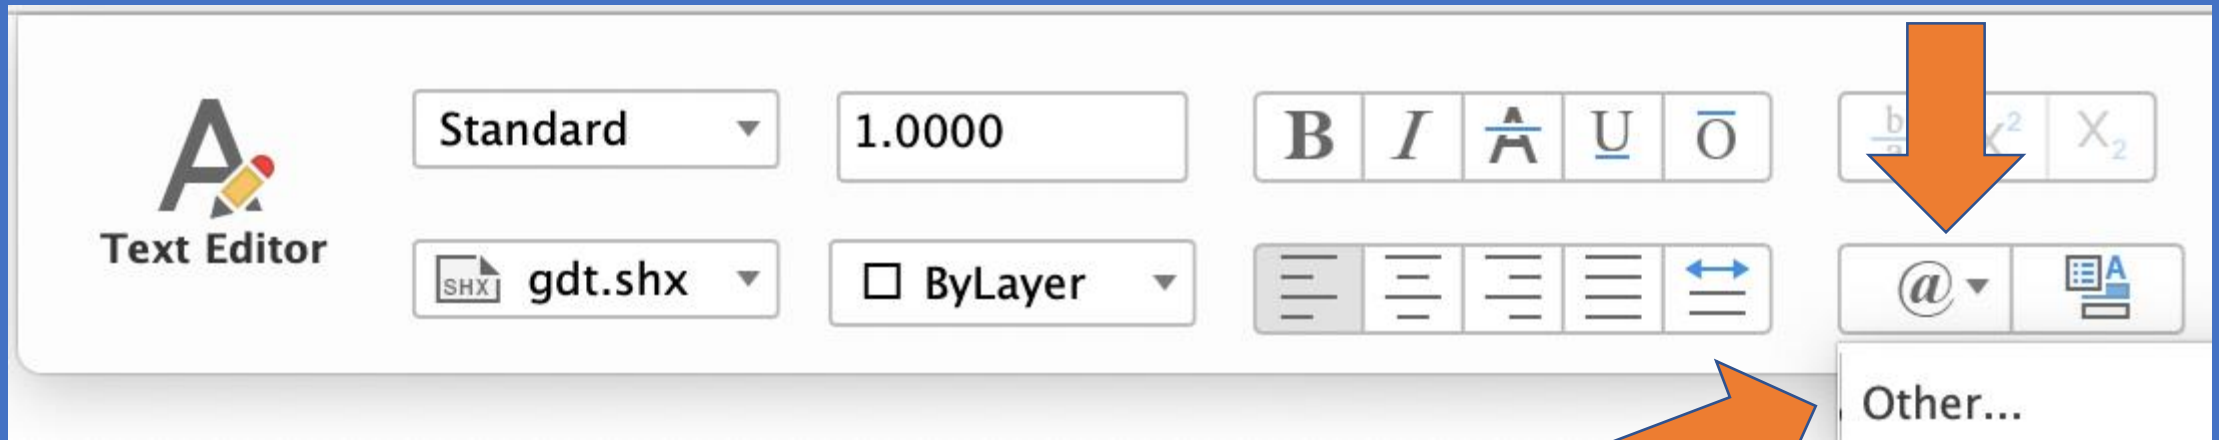


Scroll thru symbol list to Other

Step Four: Click Gear Symbol

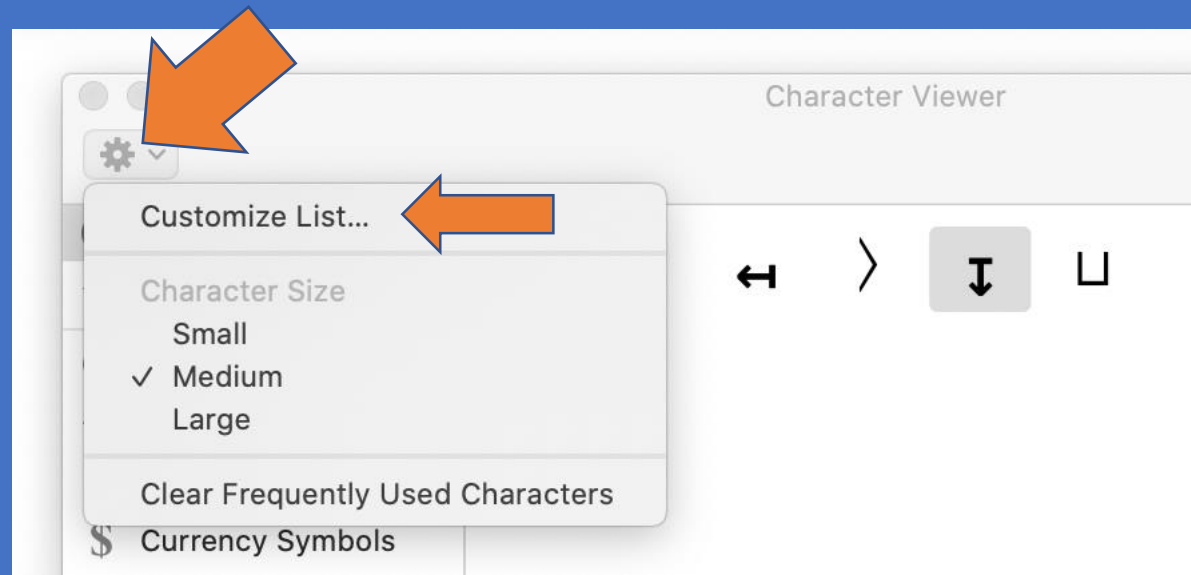

to Customize List


Step Five: from Select Categories Flyout

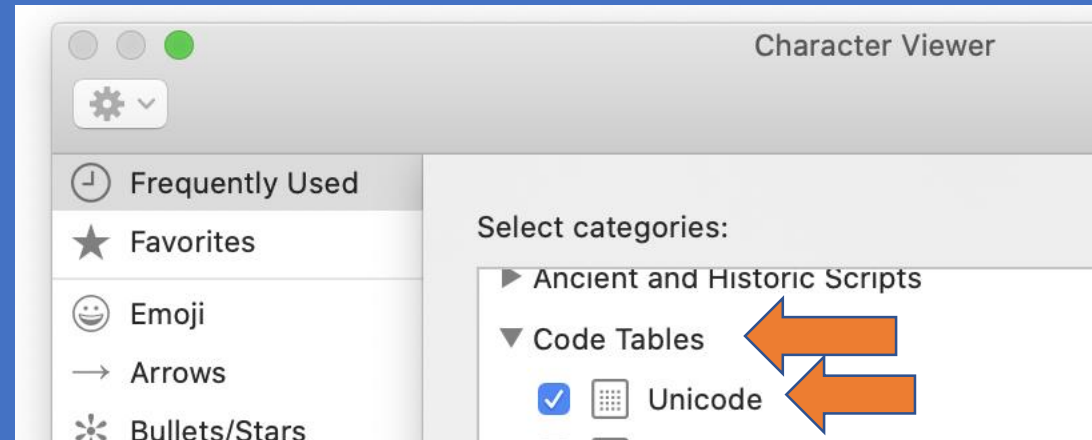

Activate Unicode under Code Tables


Part Two

Adding Symbols to Dimensions

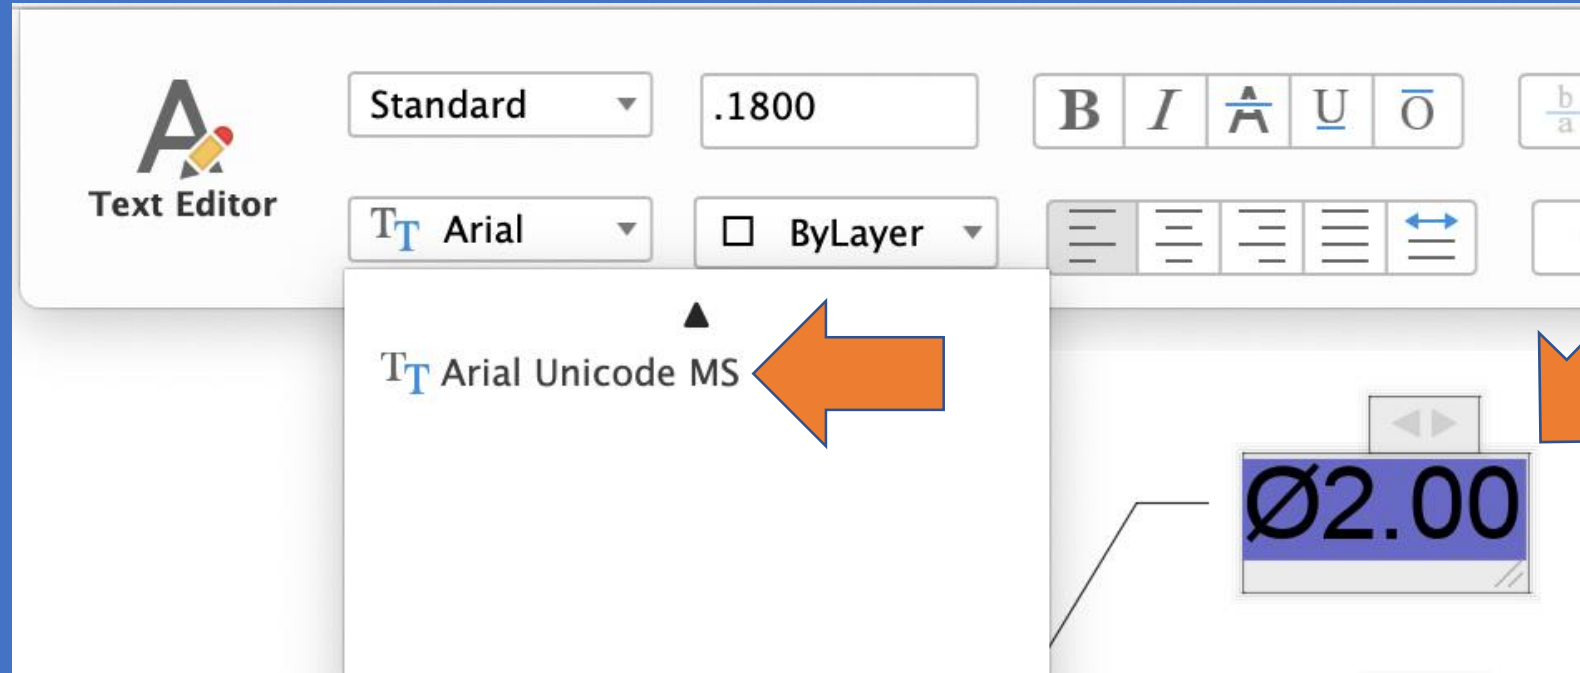

Right-Click Dimension & Change to
Arial Unicode MS

Within Character Viewer

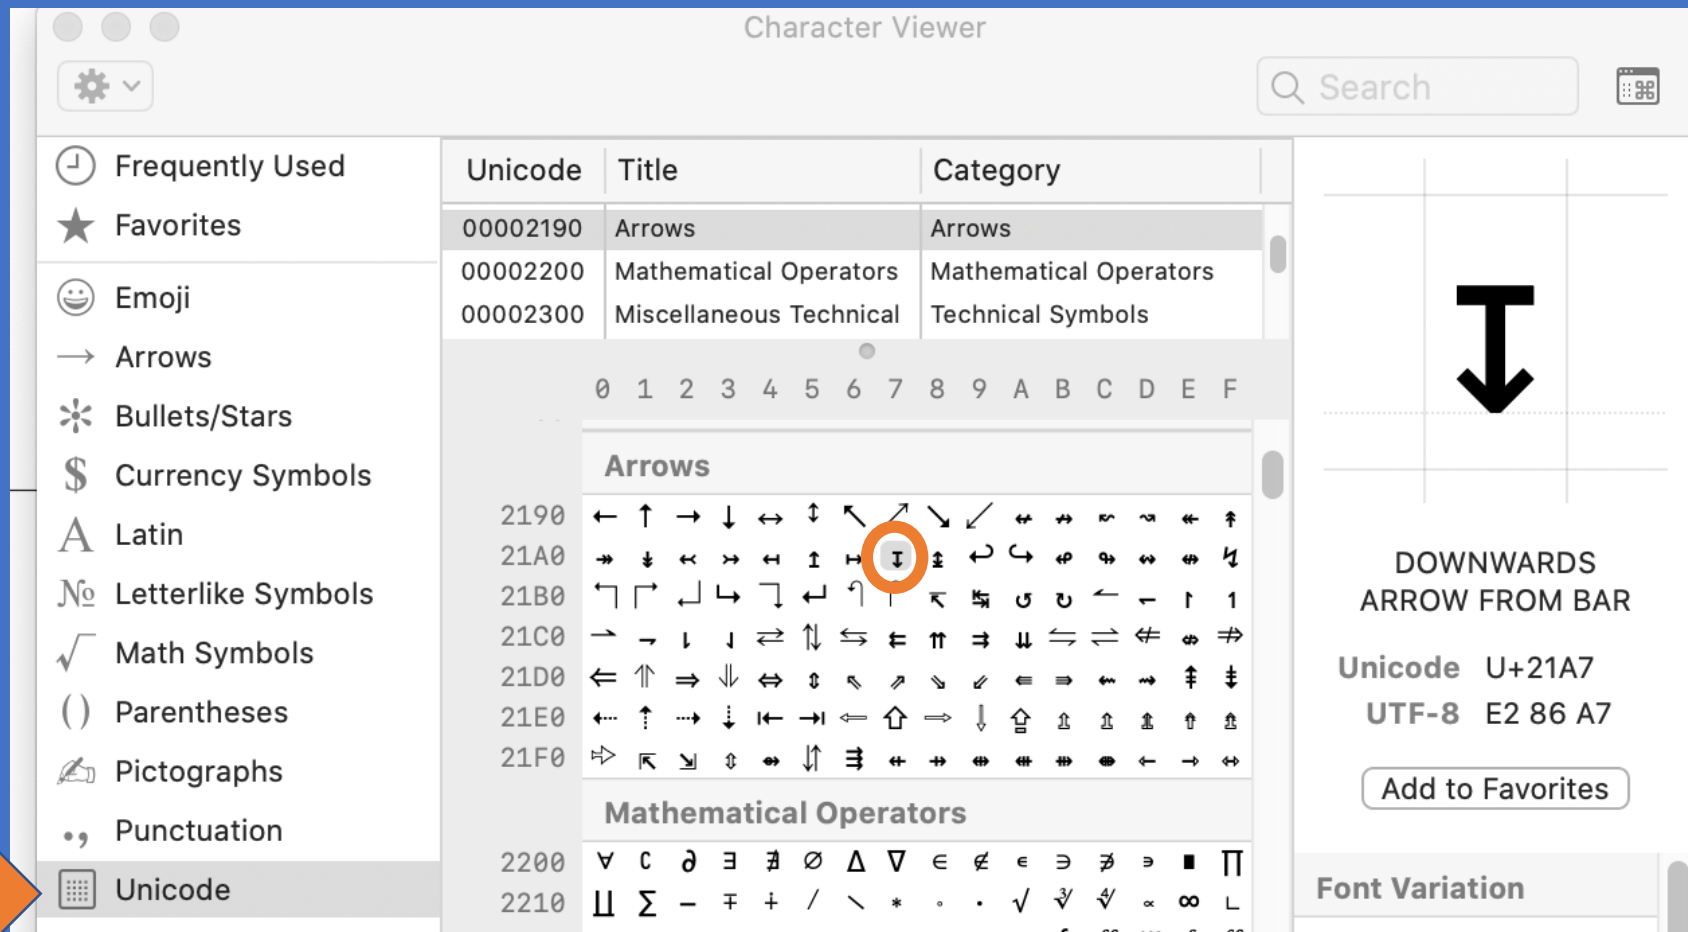


Reverse Highlight Unicode and Select

Unicode Symbols

Depth = 21A7




Counterbore = 2334

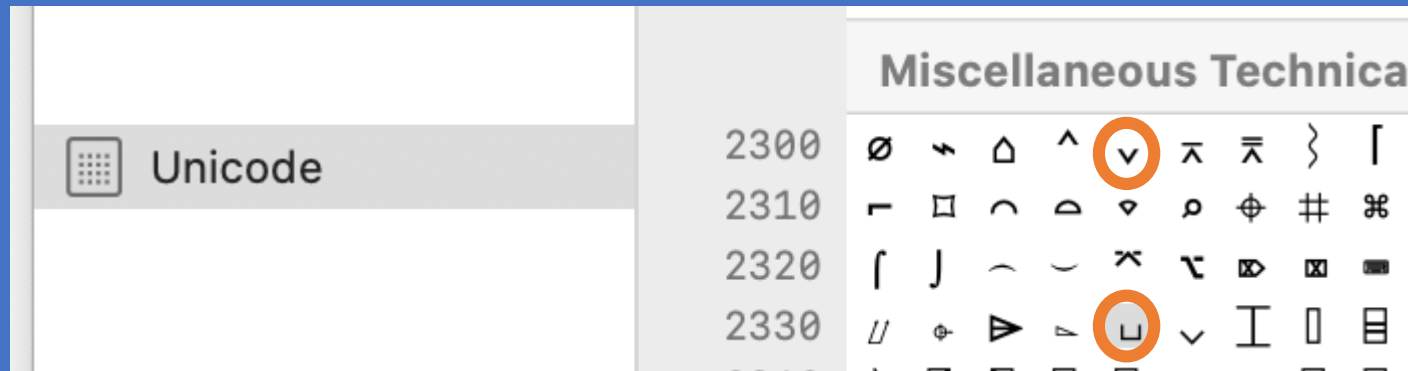

Countersink = 2304

Example with

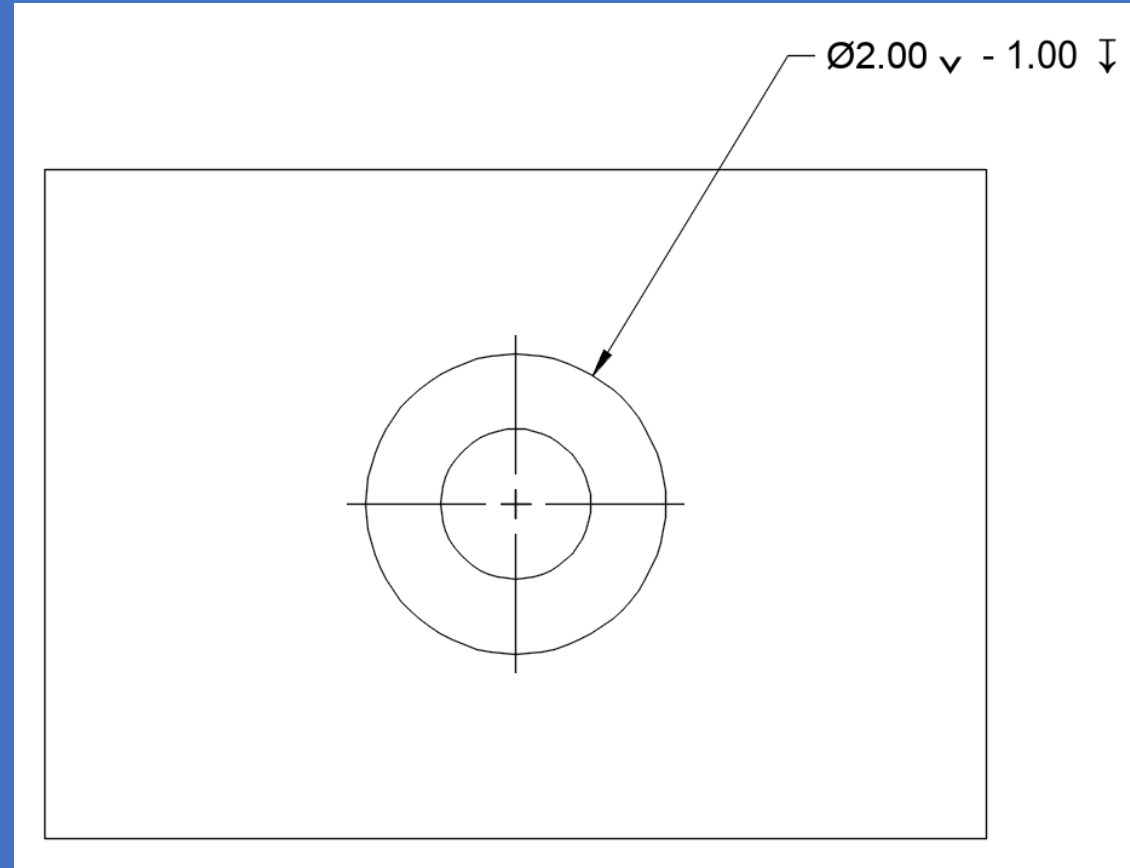

Countersink & Depth Symbols